


# Panasonic<sup>®</sup>

## Operating Instructions <Operations and Settings>

---

### Remote Camera Controller

Model No. **AW-RP50N**

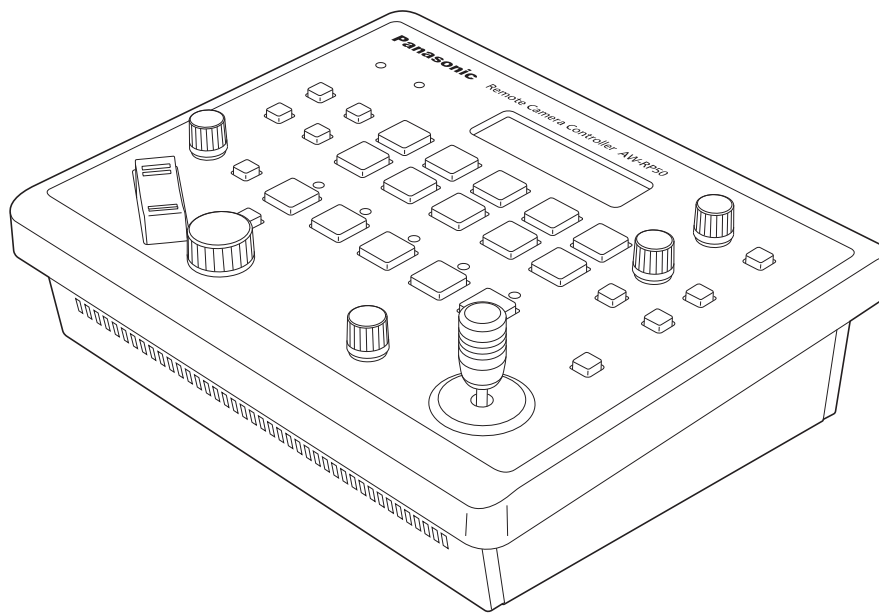

# Contents

<b>Before use</b> .....	<b>3</b>	Setting the operations to be performed when a preset operation is executed .....	23
Overview.....	3	Returning the remote cameras to their home position .....	23
Trademarks and registered trademarks.....	3	Adjusting the panning, tilting, zooming and focusing speed.....	23
About copyright and licence .....	3	Setting the movement range of the remote camera (limiter function).....	24
Concerning the ratings display .....	3	Controlling the peripheral devices connected to the remote cameras.....	26
Disclaimer of warranty .....	3	Adjusting the minimum lens zoom start speed.....	27
Network security.....	3	Exercising external control over the preset memory data .....	27
<b>How to turn the power of the remote cameras on and off</b> .....	<b>4</b>	Locking the button operations .....	27
<b>Setting and operating the preset memories</b> .....	<b>7</b>	Adjusting the LCD panel backlight.....	27
Registering data in the preset memories.....	7	Switching the camera group.....	28
Executing the preset data .....	8	Setting the rotation direction of the iris dial and the operation during AWB and ABB execution .....	28
Deleting the preset memory data .....	8	Switching the ND filter.....	28
<b>Selecting the settings for a selected remote camera</b> .....	<b>9</b>	Linking to the AW-SF100 auto tracking software.....	29
Setting the gain .....	9	<b>Setting linkup with the switcher</b> .....	<b>30</b>
Setting the pedestal.....	9	Switcher network settings.....	30
Setting the white balance .....	10	Link setting .....	31
Setting the black balance .....	13	<b>Setting the functions when the unit is linked with the switcher</b> .....	<b>32</b>
Setting the shutter speed .....	14	Setting the image output and image input.....	32
Setting the detail.....	14	Switcher settings .....	33
Setting the shooting mode.....	15	Setting for the information to be displayed on the OSD.....	36
Specifying the color bars .....	15	<b>Checking the equipment alarm information</b> .....	<b>38</b>
Registration of functions in the USER buttons .....	16	<b>Returning the unit to its factory status</b> .....	<b>39</b>
Setting the crop output image for during cropping.....	16	<b>Control interface for external devices</b> .....	<b>40</b>
Enabling or disabling and changing the level of the haze elimination function.....	16	<b>Setup Software</b> .....	<b>41</b>
Setting the sensitivity mode.....	16	Installing the software.....	41
Enabling or disabling the dynamic range stretcher.....	16	IP settings.....	41
<b>Operating the menu items of the selected remote camera</b> .....	<b>17</b>	Saving and loading data .....	44
<b>Setting the USER buttons</b> .....	<b>18</b>	Referencing the network environment.....	45
<b>Tally settings</b> .....	<b>19</b>	Connection authentication function (basic and digest authentication).....	46
<b>Setting the functions</b> .....	<b>20</b>	<b>Table of menu items</b> .....	<b>47</b>
Setting the remote camera operations .....	21		
Setting the speed at which to move to the position set by the preset memory .....	23		

## How the model's Operating Instructions manuals are configured

- The manual of this Remote Camera Controller (hereafter, "the unit") is divided into two manuals: one is the <Operations and Settings> (this manual: PDF file), and the other is the <Basics>. Before installing the unit, be sure to read the <Basics> to ensure that the unit is installed correctly.
- For the purposes of this manual, the model numbers of the units are given as listed in the table below.

Model number of unit	Model number given in manual	Model number of unit	Model number given in manual	Model number of unit	Model number given in manual
AW-HS50N	AW-HS50	AW-E650P	AW-E650	AW-PH650N	AW-PH650
AW-HE50HN	AW-HE50	AW-E750P	AW-E750	AW-IF400G	AW-IF400
AW-HE50SN	AW-HE50	AW-E860N	AW-E860	AK-HC1500G	AK-HC1500
AW-HE100N	AW-HE100	AW-PH360N	AW-PH360	AK-HC1800G	AK-HC1800
AW-HE870N	AW-HE870	AW-PH400P	AW-PH400		
AW-E350P	AW-E350	AW-PH405N	AW-PH405		

- In these instructions, the phrases "pan-tilt head and camera combination" and "camera integrated with a pan-tilt head" are both referred to collectively as "**remote camera**" except in places where specific equipment is mentioned.

# Before use

---

## ■ Overview

This unit is a controller which is designed to control remote cameras (cameras integrated with pan-tilt heads) and pan-tilt head systems (which consist of pan-tilt heads and the cameras which are mounted on them).

By means of an IP connection, an operating environment where the unit is tied in with the AW-HE50 HD integrated camera and AW-HS50 compact live switcher is achieved.

When IP connections are used, the unit can be used to control up to 100 remote cameras.

When serial connections are used, up to five remote cameras and pan-tilt head systems can be controlled.

## ■ Trademarks and registered trademarks

- Microsoft, Windows, Windows Vista, Windows 7 and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Intel and Intel Core are trademarks or registered trademarks of Intel Corporation in the United States and other countries.
- Adobe and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- Other names of companies and products contained in these Operating Instructions may be trademarks or registered trademarks of their respective owners.

## ■ About copyright and licence

Distributing, copying, disassembling, reverse compiling, reverse engineering, and also exporting in violation of export laws of the software provided with this unit are expressly prohibited.

## ■ Concerning the ratings display

The unit's name, model number and electrical ratings are indicated on its bottom panel.

## ■ Disclaimer of warranty

IN NO EVENT SHALL Panasonic Corporation BE LIABLE TO ANY PARTY OR ANY PERSON, EXCEPT FOR REPLACEMENT OR REASONABLE MAINTENANCE OF THE PRODUCT, FOR THE CASES, INCLUDING BUT NOT LIMITED TO BELOW:

- ① ANY DAMAGE AND LOSS, INCLUDING WITHOUT LIMITATION, DIRECT OR INDIRECT, SPECIAL, CONSEQUENTIAL OR EXEMPLARY, ARISING OUT OF OR RELATING TO THE PRODUCT;
- ② PERSONAL INJURY OR ANY DAMAGE CAUSED BY INAPPROPRIATE USE OR NEGLIGENT OPERATION OF THE USER;
- ③ UNAUTHORIZED DISASSEMBLE, REPAIR OR MODIFICATION OF THE PRODUCT BY THE USER;
- ④ INCONVENIENCE OR ANY LOSS ARISING WHEN IMAGES ARE NOT DISPLAYED, DUE TO ANY REASON OR CAUSE INCLUDING ANY FAILURE OR PROBLEM OF THE PRODUCT;
- ⑤ ANY PROBLEM, CONSEQUENTIAL INCONVENIENCE, OR LOSS OR DAMAGE, ARISING OUT OF THE SYSTEM COMBINED BY THE DEVICES OF THIRD PARTY;
- ⑥ ANY INCONVENIENCE, DAMAGES OR LOSSES RESULTING FROM ACCIDENTS CAUSED BY AN INADEQUATE INSTALLATION METHOD OR ANY FACTORS OTHER THAN A DEFECT IN THE PRODUCT ITSELF;
- ⑦ LOSS OF REGISTERED DATA CAUSED BY ANY FAILURE;
- ⑧ ANY DAMAGES, CLAIMS, ETC. DUE TO LOSS OR LEAKAGE OF THE SETTING DATA SAVED ON THIS UNIT OR IN A PERSONAL COMPUTER.

## ■ Network security

As you will use this unit connected to a network, your attention is called to the following security risks.

- ① Leakage or theft of information through this unit
- ② Use of this unit for illegal operations by persons with malicious intent
- ③ Interference with or stoppage of this unit by persons with malicious intent

It is your responsibility to take precautions such as those described below to protect yourself against the above network security risks.

- Use this unit in a network secured by a firewall, etc.
- If this unit is connected to a network that includes PCs, make sure that the system is not infected by computer viruses or other malicious entities (using a regularly updated antivirus program, anti-spyware program, etc.).
- Refrain from connections that use public lines.

# How to turn the power of the remote cameras on and off

## How to turn the power of the remote cameras on

Follow one of the procedures below to turn on the power of the remote cameras.

- Turning on the power one camera at a time
- Turning the power of the cameras on simultaneously as the unit's power is turned on
- Turning on the power of a multiple number of cameras
  - Turning on the power of all the cameras
  - Turning on the power of the selected group of cameras

Each of these procedures is described in turn below.


### Turning on the power one camera at a time

#### 1 Select the remote camera.

When the corresponding CAMERA STATUS/ SELECTION button is held down, the name of the remote camera is displayed on the top line of the LCD panel and POWER OFF is displayed on the bottom line.

#### 2 Turn the F2 dial to select "ON", and press the F2 dial.

The power of the selected remote camera is turned on.

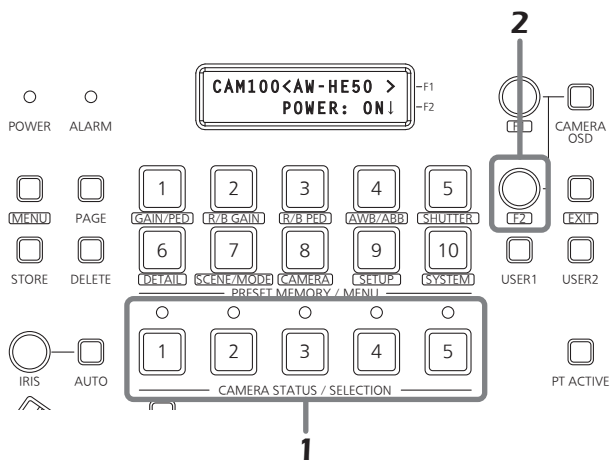

### Turning the power of the cameras on simultaneously as the unit's power is turned on

#### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

#### 2 Set PRESET MEMORY/MENU 8 button (CAMERA) to ON.

When the button is pressed and its indicator is lighted, the [CAMERA] menu is displayed on the LCD panel.



#### 3 Turn the F1 dial to display the [POWER] menu, and press the F1 dial.



Press the F1 dial.



#### 4 Turn the F1 dial to display the [AUTO ON] menu.



Turn the F1 dial.



#### 5 Turn the F2 dial to select "On", and press the F2 dial.

When "Serial" or "Network" has been selected as the CAMERA CTL item on the [SYSTEM] menu for any of the remote cameras, the power of those remote cameras will be turned on simultaneously as the unit's power is turned on.

#### Note

Depending on the number of cameras connected, it may take some moments for the unit's operation to take effect.

# How to turn the power of the remote cameras on and off

## Turning on the power of a multiple number of cameras

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 8 button (CAMERA) to ON.

When the button is pressed and its indicator is lighted, the [CAMERA] menu is displayed on the LCD panel.

[ 1 ] GROUP ▼

### 3 Turn the F1 dial to display the [POWER] menu, and press the F1 dial.

[ 2 ] POWER ◆

↓ Press the F1 dial.

1 . CAM POWER ▼  
ALL OFF↓

## Turning on the power of all the cameras

### 4 Turn the F2 dial to select “ALL ON”, and press the F2 dial.

1 . CAM POWER ▼  
ALL ON↓

The power of all the remote cameras is now turned on.

## Turning on the power of the selected group of cameras

### 4 Turn the F2 dial to select “GROUP ON”, and press the F2 dial.

1 . CAM POWER ▼  
GROUP ON↓

The power of the selected group of remote cameras is turned on.

# How to turn the power of the remote cameras on and off

## How to turn the power of the remote cameras off

Follow one of the procedures below to turn off the power of the remote cameras.

- Turning off the power one camera at a time
- Turning off the power of a multiple number of cameras
  - Turning off the power of all the cameras
  - Turning off the power of the selected group of cameras

Each of these procedures is described in turn below.


### Turning off the power one camera at a time

#### 1 Select the remote camera.

When the corresponding CAMERA STATUS/ SELECTION button is held down, the name of the remote camera is displayed on the top line of the LCD panel and POWER ON is displayed on the bottom line.

#### 2 Turn the F2 dial to select "OFF", and press the F2 dial.

The power of the selected remote camera is turned off.

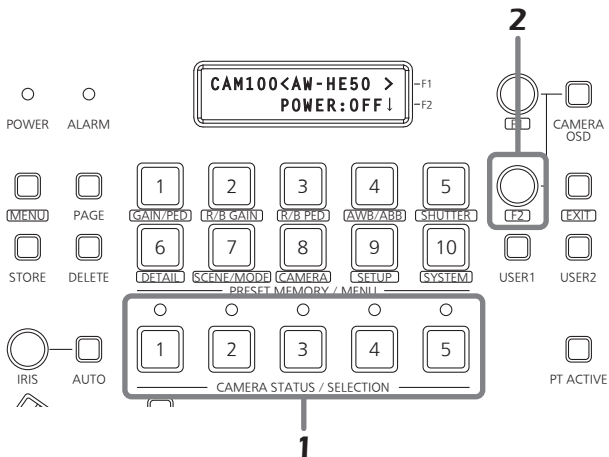

### Turning off the power of a multiple number of cameras

#### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

#### 2 Set PRESET MEMORY/MENU 8 button (CAMERA) to ON.

When the button is pressed and its indicator is lighted, the [CAMERA] menu is displayed on the LCD panel.



#### 3 Turn the F1 dial to display the [POWER] menu, and press the F1 dial.



### Turning off the power of all the cameras

#### 4 Turn the F2 dial to select "ALL OFF", and press the F2 dial.



The power of all the remote cameras is now turned off.

### Turning off the power of the selected group of cameras

#### 4 Turn the F2 dial to select "GROUP OFF", and press the F2 dial.



The power of the selected group of remote cameras is turned off.

# Setting and operating the preset memories

This unit is provided with a function for registering the positions to be shot by the remote cameras and the settings of the remote cameras in the remote cameras themselves. Up to 100 sets of data (presets) can be registered in these memories.

The positions and settings listed below can be registered.

- Pan/tilt positions
- Zoom positions
- Focus positions
- Lens iris settings (manual iris only)
- White balance mode settings

## Note

The number of position and setting data which can be registered as preset memory data differ from one remote camera to another. For further details, check the Operating Instructions of the model concerned.

## ■ Registering data in the preset memories

**1** Press one of the CAMERA STATUS/SELECTION buttons 1 to 5 to select the remote camera to be operated.

**2** Output the images to be shot by the camera to the monitor.

The camera angle to be registered is determined by operating the PAN/TILT lever and ZOOM button. If necessary, adjust the focus and iris as well.

**3** Press the STORE button.

**4** After pressing the PAGE button, press the PRESET MEMORY/MENU button to specify the “Page number” to be registered.

In this step, the “Page number” to be registered as the preset memory is specified.


- For details on the relationship between the “Preset number”, “Page number” and “Number on the page”, refer to the section entitled <Preset numbers and registered pages>.

**5** Hold down the PRESET MEMORY/MENU button to specify the “Number on the page”.

The preset memory data is registered at the same time as the “Number on the page” is specified.

## Note

When specifying the “Number on the page”, hold down the PRESET MEMORY/MENU button.

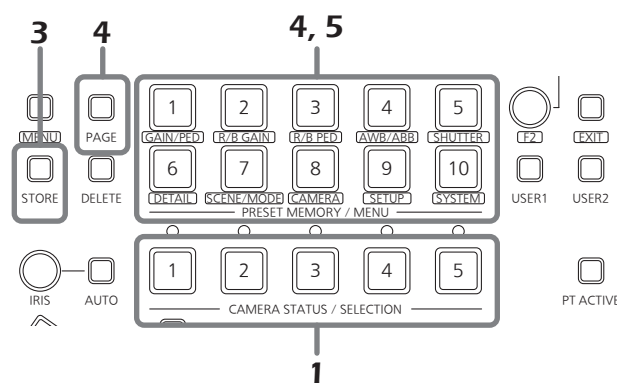

To register more data, repeat steps 2 to 5.

- When specifying a different “Number on the page” on the same “Page number”, it is registered by skipping step 4 and carrying out the operation in step 5 only.
- The PRESET MEMORY/MENU button corresponding to the preset number lights when preset memory data has been registered in the AW-HE50.

### <Preset numbers and registered pages>

Preset number	Page number	Number on the page
1 to 10	1	1 to 10
11 to 20	2	1 to 10
21 to 30	3	1 to 10
31 to 40	4	1 to 10
41 to 50	5	1 to 10
51 to 60	6	1 to 10
61 to 70	7	1 to 10
71 to 80	8	1 to 10
81 to 90	9	1 to 10
91 to 100	10	1 to 10

### Memo

**Example:** When specifying preset 21  
 Press the following buttons in the order given:  
 PAGE button → PRESET MEMORY/MENU 3 button →  
 PRESET MEMORY/MENU button 1.

# Setting and operating the preset memories

## ■ Executing the preset data

- 1 Press one of the CAMERA STATUS/SELECTION buttons 1 to 5 to select the remote camera to be operated.

Select the remote camera which is to be pointed at the camera angle registered in the preset memory.


- 2 After pressing the PAGE button, press the PRESET MEMORY/MENU button to specify the registered “Page number” of the preset memory.

In this step, specify the registered “Page number” of the preset memory.


- For details on the relationship between the “Preset number”, “Page number” and “Number on the page”, refer to the section entitled <Preset numbers and registered pages>.

- 3 Press the PRESET MEMORY/MENU button to specify the “Number on the page”.

The preset memory data is executed at the same time as the “Number on the page” are specified.

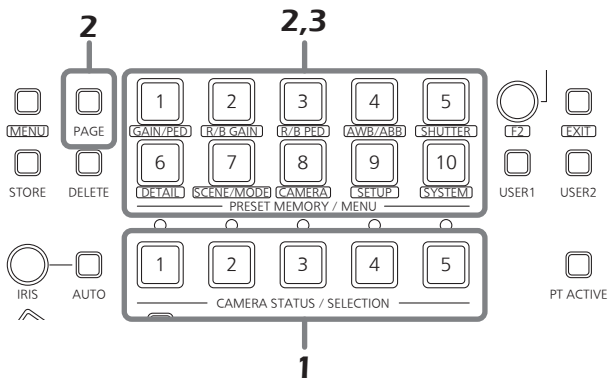

- When the preset memory data is executed, the preset number is displayed on the right side of the top level of the LCD panel.



The preset number display is cleared when the power of the unit or remote camera has been turned off or when the camera group has been switched.

- In the case of the AW-HE50, the corresponding PRESET MEMORY/MENU button will go off, and then it will light again when preset memory data is executed. In the case of another remote camera connected serially, the corresponding PRESET MEMORY/MENU button will simply just light.

## ■ Deleting the preset memory data

### Note

This function does not work with the AW-PH400.

- 1 Press one of the CAMERA STATUS/SELECTION buttons 1 to 5 to select the remote camera to be operated.

Select the remote camera whose preset memory data is to be deleted.

- 2 Press the DELETE button.

- 3 After pressing the PAGE button, press the PRESET MEMORY/MENU button to specify the “Page number” of the preset memory data to be deleted.

In this step, specify the “Page number” of the preset memory data to be deleted.

- For details on the relationship between the “Preset number”, “Page number” and “Number on the page”, refer to the section entitled <Preset numbers and registered pages>.

- 4 Hold down the PRESET MEMORY/MENU button to specify the “Number on the page”.


The preset memory data is deleted at the same time as the “Number on the page” is specified.

### Note

When specifying the “Number on the page”, hold down the PRESET MEMORY/MENU button.

### Memo

When multiple PRESET MEMORY/MENU buttons are held down at the same time, the preset memories for the applicable “Number on the page” can be deleted at the same time.

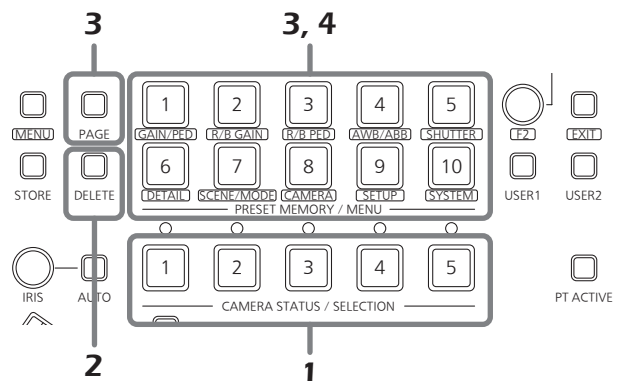



# Selecting the settings for a selected remote camera

The following settings and adjustments can be performed for a selected remote camera directly from this unit.

- Gain
- Pedestal
- R and B gain values
- R and B pedestal values
- White balance
- Black balance
- Shutter speed
- Detail
- Shooting mode selection
- Color bar selection

## Note

It is not possible to perform operations for those functions which are not supported by the model concerned.  
For further details, refer to the "Table of menu items".

## Setting the gain

In places which are too dark, increase the gain level; conversely, in places which are too light, reduce the gain level.

When "Auto" is selected, the light quantity is adjusted automatically.

When the gain is increased, the noise level also increases.


### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 1 button (GAIN/PED) to ON.

When the button is pressed and its indicator lights, the [GAIN/PED] menu is displayed on the LCD panel.

### 3 Turn the F1 dial to select the setting.

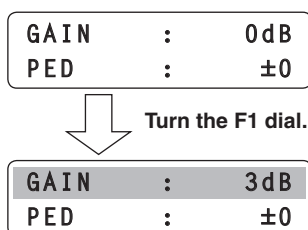

## Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

## Setting the pedestal

Perform the black level (pedestal) adjustment in order to make it easier to see the very dark parts of the images. Adjustment in the "–" direction makes the parts closer to black; conversely, adjustment in the "+" direction makes the parts closer to white.


### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 1 button (GAIN/PED) to ON.

When the button is pressed and its indicator lights, the [GAIN/PED] menu is displayed on the LCD panel.

### 3 Turn the F2 dial to select the setting.

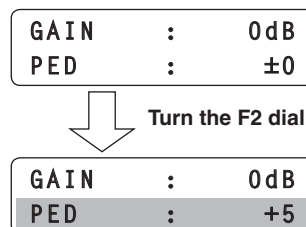

## Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

# Selecting the settings for a selected remote camera

## Setting the white balance

The ratio between RGB (three primary colors) is adjusted so that white will be reproduced accurately.

If the white balance is off, not only will white be reproduced poorly but the color tone of the entire picture will also deteriorate.

The white balance must be adjusted when using a remote camera for the first time or when the remote camera has not been used for a prolonged period of time. It must also be adjusted when changes have been made in the lighting conditions or brightness.

The white balance can be adjusted automatically or manually (fine adjustment after automatic adjustment).

In addition, preset values or the “auto tracking white adjustment (ATW)” which continues to adjust the white balance automatically all the time can be selected.

The results of white balance adjustments can be stored in memory A or memory B when “AWB A” or “AWB B” has been selected for the white balance.

### Selecting the white balance mode

Follow the steps below to set the white balance mode.

#### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

#### 2 Set the PRESET MEMORY/MENU 4 button (AWB/ABB) to ON.

When the button is pressed and its indicator lights, the [AWB/ABB] menu is displayed on the LCD panel.

#### 3 Turn the F1 dial to select the white balance mode.



The modes which can be selected differ depending on the remote camera connected.

Remote camera	Mode	Remote camera status
AW-HE50	AWB A	The status of the white balance registered in remote camera memory A is established.
	AWB B	The status of the white balance registered in remote camera memory B is established.
	ATW	In this mode, the white balance is automatically adjusted continuously all the time and automatically compensated even when the light source or color temperature has changed.
AW-HE100 AW-HE870 AW-E860 AW-E750 AW-E650 AW-E350	AWB A	The status of the white balance registered in remote camera memory A is established.
	AWB B	The status of the white balance registered in remote camera memory B is established.
	3200K	The status of the white balance which was adjusted at a brightness of 3200K is established.
	5600K	The status of the white balance which was adjusted at a brightness of 5600K is established.
	ATW	In this mode, the white balance is automatically adjusted continuously all the time and automatically compensated even when the light source or color temperature has changed.
AK-HC1500 AK-HC1800	—	—

# Selecting the settings for a selected remote camera

## Automatically adjusting the white balance

Set the automatic adjustment if the coloring appears unnatural under certain light sources or other conditions. If the white serving as the reference can be recognized, it is possible to shoot with natural coloring.

### Memo

When the white balance is adjusted, the R and B GAIN values are set to "±0".

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 4 button (AWB/ABB) to ON.

When the button is pressed and its indicator lights, the [AWB/ABB] menu is displayed on the LCD panel.

### 3 Turn the F1 dial to select the place where the white balance is to be stored.

Select "AWB A" or "AWB B" to select the place where the white balance is stored.



- This step need not be taken when the AK-HC1500 or AK-HC1800 is used as the remote camera.

### 4 Turn the F2 dial to select AWB, and press the F2 dial.

The remote camera now automatically adjusts the white balance, and registers it at the place selected in step 3.

When automatic adjustment is performed, the following details are displayed on the LCD panel.

#### AWB ACTIVE:

This appears while AWB is being executed.

#### AWB OK:

This appears for 3 seconds after AWB is completed successfully.

#### AWB NG:

This appears for 3 seconds after AWB is completed unsuccessfully.  
(AWB was executed while ATW, 3200K or 5600K was selected.)

- If it was not possible to adjust the white balance properly, change the brightness, iris, subject, light source or other aspect, and try adjusting it again.

#### Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

# Selecting the settings for a selected remote camera

## Manually adjusting the white balance (Setting the R and B gain values)

- 1 As with the automatic adjustment, fill the screen with a white subject.**
- 2 Connect a waveform monitor or color monitor to the video output connector on the currently selected remote camera.**
- 3 Set the MENU button to ON.**  
Press the MENU button to light its indicator.
- 4 Set the PRESET MEMORY/MENU 2 button (R/BGAIN) to ON.**  
When the button is pressed and its indicator lights, the [R/BGAIN] menu is displayed on the LCD panel.
- 5 Turn the F1 dial to select the R gain setting; similarly, turn the F2 dial to select the B gain setting.**

R GAIN	:	±0	← F1 dial
B GAIN	:	±0	← F2 dial

### Notes

- If “---” is displayed for the R and B gain settings on the LCD panel, it means that the remote camera concerned does not support R and B gain settings.
- The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

## Auto tracking white adjustment (ATW)

This function provides compensation automatically so that the white balance is adjusted even when the light source or color temperature changes during shooting, so that images that appear the least odd (that is, the most natural looking) are produced.

- 1 Set the MENU button to ON.**  
Press the MENU button to light its indicator.
- 2 Set the PRESET MEMORY/MENU 4 button (AWB/ABB) to ON.**  
When the button is pressed and its indicator lights, the [AWB/ABB] menu is displayed on the LCD panel.
- 3 Turn the F1 dial to select ATW.**

AWB MOD :	ATW↓
SET :	AWB↓

- If there is no white on the screen, it may not be possible to compensate the white balance properly.  
Similarly, under certain light source and color temperature conditions, it may not be possible to compensate the white balance properly.

### Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

# Selecting the settings for a selected remote camera

## ■ Setting the black balance

The black balance must be adjusted when using a remote camera for the first time or when the remote camera has not been used for a prolonged period of time.

It must also be adjusted when significant changes have occurred in the ambient temperature or at the change of the seasons.

If the camera is used with the same settings and under the same conditions, the black balance need not be adjusted again.

When the black balance is adjusted again, the previous memory data will be erased and replaced with the new black balance settings.

When the black balance is set, the R and B pedestal adjustment settings are returned to  $\pm 0$ .

### Automatically adjusting the black balance

#### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

#### 2 Set the PRESET MEMORY/MENU 4 button (AWB/ABB) to ON.

When the button is pressed and its indicator lights, the [AWB/ABB] menu is displayed on the LCD panel.

#### 3 Turn the F2 dial to select ABB, and press the F2 dial.



AWB MOD: AWB B↓  
SET : ABB↓

The remote camera now automatically adjusts the black balance.

When automatic adjustment is performed, the following details are displayed on the LCD panel.

##### ABB ACTIVE:

This appears while ABB is being executed.

##### ABB OK:

This appears for 3 seconds after ABB was completed successfully.

##### ABB NG:

This appears for 3 seconds after ABB was completed unsuccessfully.

### Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

### Manually adjusting the black balance (Setting the R and B pedestal)

#### 1 Connect a waveform monitor or color monitor to the video output connector on the currently selected remote camera.


#### 2 Set the MENU button to ON.

Press the MENU button to light its indicator.

#### 3 Set the PRESET MEMORY/MENU 3 button (R/BPED) to ON.

When the button is pressed and its indicator lights, the [R/BPED] menu is displayed on the LCD panel.

#### 4 Turn the F1 dial to select the R pedestal setting; similarly, turn the F2 dial to select the B pedestal setting.

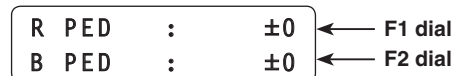

R PED : ±0 ← F1 dial  
B PED : ±0 ← F2 dial

### Notes

- If “---” is displayed for the R and B pedestal settings on the LCD panel, it means that the remote camera concerned does not support R and B pedestal settings.
- The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

# Selecting the settings for a selected remote camera

## ■ Setting the shutter speed

The shutter mode and shutter speed of the remote camera can be selected.

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 5 button (SHUTTER) to ON.

When the button is pressed and its indicator lights, the [SHUTTER] menu is displayed on the LCD panel.

### 3 Turn the F1 dial to select the shutter mode.

When "Step" has been selected as the shutter mode, the shutter speed can be selected by turning the F2 dial.

SHUTTER:	Step↓	← F1 dial
SPEED :	1/100	← F2 dial

#### Notes

- The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.
- When a remote camera connected serially is selected and its shutter speed is set, and then a remote camera in another group is assigned to the CAMERA STATUS/SELECTION button, the shutter speed will be set to "1/100" when a menu operation is next performed.

## ■ Setting the detail

The image detail (image sharpness) can be adjusted.

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 6 button (DETAIL) to ON.

When the button is pressed and its indicator lights, the [DETAIL] menu is displayed on the LCD panel.

### 3 Turn the F1 dial to select On or Off.

### 4 Turn the F2 dial to select the detail level.

DETAIL :	On	← F1 dial
LEVEL :	LOW	← F2 dial

#### Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

# Selecting the settings for a selected remote camera

## ■ Setting the shooting mode

Select the shooting mode that matches the shooting conditions.

Select the mode according to the shooting conditions and your preferences.

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 7 button (SCENE/MODE) to ON.

When the button is pressed and its indicator lights, the [SCENE/MODE] menu is displayed on the LCD panel.

### 3 Turn the F1 dial to select the shooting mode.

SCENE	:	MANU1↓
MODE	:	CAM↓

#### Note

The settings will differ depending on the remote camera connected.  
For further details, check the Operating Instructions of the model concerned.

## ■ Specifying the color bars

The images to be output from the remote camera can be switched between the “camera images” and “color bars”.

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set the PRESET MEMORY/MENU 7 button (SCENE/MODE) to ON.

When the button is pressed and its indicator lights, the [SCENE/MODE] menu is displayed on the LCD panel.

### 3 Turn the F2 dial to select “CAM” (camera image) or “BAR” (color bars).

SCENE	:	MANU1↓
MODE	:	BAR↓

# Selecting the settings for a selected remote camera

## Functions available when connected with an AK-UB300G Multi-Purpose Camera

### ■ Registration of functions in the USER buttons

Refer to “Setting the USER buttons” for details about assigning functions to the USER buttons.

Menu item	Details of operation performed
SHOOTING	Pressing the USER button assigned with SHOOTING allows you to switch the sensitivity mode (NORMAL/HIGH SENS).
DRS	Pressing the USER button assigned with DRS allows you to set the dynamic range stretcher function to ON (enabled) or OFF (disabled).
CROP OUT SEL	Pressing the USER button assigned with CROP OUT SEL allows you to set the crop output image for during cropping with a PRESET MEMORY/MENU button (1 to 3).

### ■ Setting the crop output image for during cropping

#### 1 Assign the CROP OUT SEL item to a USER button.

Refer to “Setting the USER buttons” for details about assigning functions to the USER buttons.

#### 2 Press the USER button assigned with CROP OUT SEL.

The USER button turns on, allowing you to set the crop output image for during cropping.

PRESET MEMORY/MENU button	Setting of the crop output image for during cropping
1	YL
2	G
3	MG

#### 3 Set the crop output image for during cropping with a PRESET MEMORY/MENU (1 to 3).

The corresponding PRESET MEMORY/MENU (1 to 3) button is lit.

### ■ Enabling or disabling and changing the level of the haze elimination function

- The following settings can be changed from [D.HAZE CLR] of the [CAMERA] menu.

Menu item	Details of operation performed
D.HAZE CLR SW	Set the haze elimination function to ON (enabled) or OFF (disabled).
D.HAZE CLR LV	Set the level (1 to 3) of haze elimination. The larger the value, the stronger the haze elimination effect.

### ■ Setting the sensitivity mode

- The following setting can be changed from [SHOOTING] of the [CAMERA] menu.

Menu item	Details of operation performed
MODE	Set the sensitivity mode to NORMAL (normal) or HIGH SENS (high sensitivity).

### ■ Enabling or disabling the dynamic range stretcher

- The following setting can be changed from [DRS] of the [CAMERA] menu.

Menu item	Details of operation performed
DRS SW	Set the dynamic range stretcher to ON (enabled) or OFF (disabled).



# Operating the menu items of the selected remote camera

The menu operations of the remote cameras can be operated from the unit for the remote camera which is now selected. The CAMERA OSD button, F1 dial and F2 dial are used to perform the operations.

When the CAMERA OSD button is held down, its indicator lights, and the on-screen menu of the selected remote camera is displayed as the output image of the remote camera.

When the button is held down again while its indicator is lighted, the menu is cleared, and the indicator goes off.



## Table of operations

Remote camera	Menu ON/OFF	Dial operation	Menu operation
AW-HE50	Hold down the CAMERA OSD button.	Turn the F1 dial. (Turn it clockwise.)	<ul style="list-style-type: none"> <li>Moves (downward) to an item.</li> <li>Changes (increments) the setting.</li> </ul>
		Turn the F1 dial. (Turn it counterclockwise.)	<ul style="list-style-type: none"> <li>Moves (upward) to an item.</li> <li>Changes (decrements) the setting.</li> </ul>
		Press the F1 dial.	Enters the setting.
AK-HC1500 AK-HC1800 AW-HE870	Hold down the CAMERA OSD button.	Turn the F1 dial. (Turn it clockwise.)	<ul style="list-style-type: none"> <li>Moves (downward) to an item.</li> <li>Changes (decrements) the setting.</li> </ul>
		Turn the F1 dial. (Turn it counterclockwise.)	<ul style="list-style-type: none"> <li>Moves (upward) to an item.</li> <li>Changes (increments) the setting.</li> </ul>
		Press the F1 dial.	Enters the setting.
AW-E350 AW-E650 AW-E750 AW-E860 AW-HE100	Hold down the CAMERA OSD button.	Turn the F1 dial. (Turn it clockwise.)	Moves (downward) to an item.
		Turn the F1 dial. (Turn it counterclockwise.)	Moves (upward) to an item.
		Press the F1 dial.	Enters the setting.
		Turn the F2 dial. (Turn it clockwise.)	<ul style="list-style-type: none"> <li>Enters the setting.</li> <li>Changes (increments) the setting.</li> </ul>
		Turn the F2 dial. (Turn it counterclockwise.)	Changes (decrements) the setting.


### Notes

- The “on” and “off” of the indicator in the CAMERA OSD button may not correspond exactly to the menu display and menu non-display when another remote camera has been selected while remote camera menu operations are being performed from the unit or when the CAMERA OSD function is set to OFF by a remote camera. In addition, the menu operations may not be performed properly.
- The operations differ depending on the remote camera model. For details on the menu items which are displayed, check the Operating Instructions of the model concerned.

# Setting the USER buttons

Menu items can be assigned to the two USER buttons (USER1, USER2).

The target function can be activated simply by pressing the USER button (USER1 or USER2).

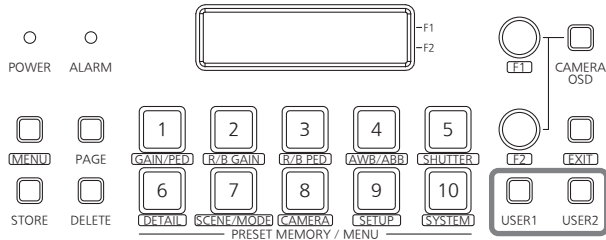

Menu item	Details of operation performed	
SWLINK	This sets the link control between the unit and switcher.	<b>On:</b> Enable <b>Off:</b> Disable
BUSCONT	This is the bus switching setting.	<b>On:</b> Enable <b>Off:</b> Disable
FASIST	This sets the focus assist function.	<b>On:</b> Enable <b>Off:</b> Disable
CAMSEL	This displays icons at the bottom left of the images from the remote camera selected by the unit on the multi view display of the switcher.	<b>On:</b> Display <b>Off:</b> Non-display
TALLY_IP	This sends the tally information sent periodically by UDP from the switcher to the remote camera.	<b>On:</b> Enable <b>Off:</b> Disable
CAMINF	This sends the camera information of the remote camera selected to the switcher.	<b>On:</b> Enable <b>Off:</b> Disable
AWB	AWB is executed when the USER button, in which AWB has been assigned, is pressed. When AWB is executed successfully, the indicator of the button goes off; conversely, when it is not executed successfully, it blinks.	
ABB	ABB is executed when the USER button, in which ABB has been assigned, is pressed. When ABB is executed successfully, the indicator of the button goes off; conversely, when it is not executed successfully, it blinks.	
POWER OFF	When the USER button in which POWER OFF has been assigned is held down, the indicator of the button lights for an instant, and power OFF is requested for all the remote cameras connected.	
CAM_GROUP SEL*1	Pressing the USER button assigned with GROUP CAM SEL allows you to switch the camera group using the PRESET MEMORY/MENU buttons (1 to 10) and PAGE button.	
ND_FILTER*1	Pressing the USER button assigned with ND_FILTER allows you to switch the ND filter using the PRESET MEMORY/MENU buttons (1 to 4).	

- \*1:
- When a USER button assigned with one of the functions above is pressed to turn the function on (indicator is lit), you cannot recall the corresponding preset memory or menu. To recall a preset memory or menu, first press the corresponding USER button again to turn the function off (indicator is off).
  - Pressing a USER button while the MENU button is on (indicator is lit) will turn off the MENU button (indicator is off).

The menu items listed in the table below can be assigned and their operations can be performed for a camera\*2 which comes with the PinP (Picture in Picture) function.

Menu item	Details of operation performed
CAM_PINP DISP	This is used to select whether to display PinP or hide its display. Each time the USER button is pressed, the setting is changed in the sequence of display → hide display → display → ...
CAM_PINP CTL	This is used to select what is to be controlled by the PAN/TILT lever and ZOOM button. Each time the USER button is pressed, the setting is changed in the sequence of PinP → main screen → PinP → ...
CAM_PINP POS	This is used to select PinP display position. Each time the USER button is pressed, the setting is changed in the sequence of top right → bottom right → bottom left → top left → top right → ...

\*2: Compatible camera: AW-HE2 (as of December 2012)

## ■ Registering functions in the USER buttons

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.


### 2 Set the PRESET MEMORY/MENU 9 button (SETUP) to ON.

When the button is pressed and its indicator lights, the [SETUP] menu is displayed on the LCD panel.




### 3 Press the F1 dial.

### 4 Turn the F1 dial to display [USER1] or [USER2].



### 5 Turn the F2 dial to select the item to be assigned, and press the F2 dial.



Turn the F2 dial, and then press it.



# Tally settings

---

Set enable (On) or disable (Off) for tally ON which provides the tally instructions to the remote camera in response to tally requests received via the GPI and network.

## 1 Set the MENU button to ON.


Press the MENU button to light its indicator.

## 2 Set PRESET MEMORY/MENU 8 button (CAMERA) to ON.


When the button is pressed and its indicator is lighted, the [CAMERA] menu is displayed on the LCD panel.



## 3 Turn the F1 dial to display the [TALLY] menu, and press the F1 dial.

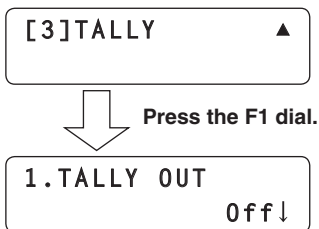

## 4 Turn the F2 dial to select On or Off, and then press the F2 dial to enter the selection.

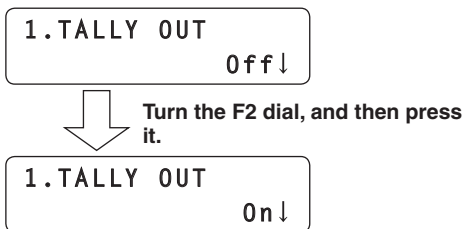

# Setting the functions

This section describes how the unit's functions are set. The following functions can be set.

- Setting of the remote camera operations
- Registration of functions in the USER buttons
- Setting the speed at which to move to the preset memory setting position
- Setting the control items used when preset data is executed
- Controlling the peripheral devices connected to the remote cameras
  - ND filter
  - AC adaptor (AW-PS300A)
  - Defroster
  - Wiper
  - Heater, fan
  - Halogen lamp
- Assignment of preset data when emergency interrupts occur
- Locking of button operations

The settings are established using the [SETUP] menu. First, the basic menu operations will be described.

## 1 Set the MENU button to ON.

Press the MENU button to light its indicator.


## 2 Set the PRESET MEMORY/MENU 9 button (SETUP) to ON.

When the button is pressed and its indicator lights, the [SETUP] menu is displayed on the LCD panel.




## 3 Turn the F1 dial to display the target menu item, and press the F1 dial.


For details on the [SETUP] menu items, refer to the "Table of menu items".

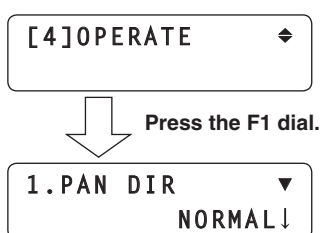

## 4 Turn the F1 dial to select the target menu item.

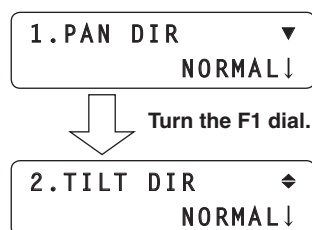

## 5 Turn the F2 dial to select the setting. Then press the F2 dial to change the setting.

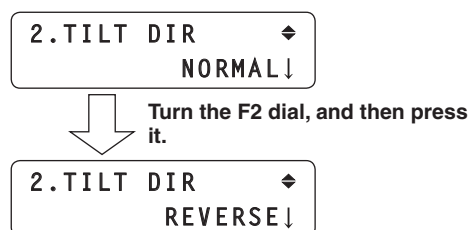

# Setting the functions

---

## ■ Setting the remote camera operations

Set these operations by selecting the [SETUP] menu followed by the [OPERATE] menu.



## ● Setting the pan, tilt, zoom and focus operation directions

Set the directions in which the remote camera is to move when the panning, tilting, zooming or focusing operation has been initiated from the unit.

### ■ Setting the panning direction

---

From the [SETUP] menu, select [OPERATE] and display [PAN DIR]. Then select either "NORMAL" or "REVERSE".



This sets the operation of the remote camera in the horizontal direction in response to the horizontal manipulation of the PAN/TILT lever.

When "NORMAL" is selected as the setting, the remote camera will move to the left when the PAN/TILT lever is leaned toward the left and, conversely, it will move to the right when the lever is leaned toward the right.

When "REVERSE" is selected, the remote camera will move in the opposite directions.

### ■ Setting the tilting direction

---

From the [SETUP] menu, select [OPERATE] and display [TILT DIR]. Then select either "NORMAL" or "REVERSE".



This sets the operation of the remote camera in the vertical direction in response to the vertical manipulation of the PAN/TILT lever.

When "NORMAL" is selected as the setting, the remote camera will move upward when the PAN/TILT lever is leaned away from you and, conversely, it will move downward when the lever is leaned toward you.

When "REVERSE" is selected, the remote camera will move in the opposite directions.

### ■ Setting the zooming direction

---

From the [SETUP] menu, select [OPERATE] and display [ZOOM DIR]. Then select either "NORMAL" or "REVERSE".



This sets the zooming operation of the lens in response to the operation of the ZOOM button.

When "NORMAL" is selected as the setting, the lens zooms toward the tele end when the TELE side of the ZOOM button is pressed and, conversely, it will zoom toward the wide end when the WIDE side is pressed.

When "REVERSE" is selected, the lens will move in the opposite directions.

### ■ Setting the focusing direction

---

From the [SETUP] menu, select [OPERATE] and display [FOCUS DIR]. Then select either "NORMAL" or "REVERSE".



This sets the focusing operation of the lens in response to the operation of the FOCUS/PUSH OTAF dial.

When "NORMAL" is selected as the setting, the lens focus moves toward the far end when the dial is turned clockwise and, conversely, it will move toward the near end when the dial is turned counterclockwise.

When "REVERSE" is selected, the lens will move in the opposite directions.

# Setting the functions

## ● Settings when the remote camera moves horizontally or vertically during tele shooting

During tele shooting, the remote camera's pan/tilt operation are slowed down to make positioning easier.

### Note

This function takes effect when the unit is connected to the AW-HE50. It does not work with any other models.

From the [SETUP] menu, select [OPERATE] and display [SPEED WITH Z]. Then set the movement speed.

5. SPEED WITH Z ◆  
Off ↓

**On:** The speed at which the remote camera moves is reduced.

**Off:** The remote camera moves at the normal speed.

## ● Selecting the control items (pan, tilt, zoom and focus)

Select the control items for the currently selected remote camera.

From the [SETUP] menu, select [OPERATE] and display [SPEED TARGET]. Then select the control item.

6. SPEED TARGET ◆  
P/T/Z/F ↓

### P/T/Z/F:


The operation speed setting takes effect for panning, tilting, zooming and focusing.

### P/T:

The operation speed setting takes effect for panning and tilting.

## ● Switching from focus control to iris control or vice versa

It is possible to switch the control, which is implemented by dial and button operations, from focus control to iris control (or vice versa).

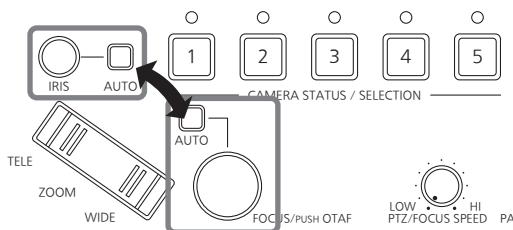

From the [SETUP] menu, select [OPERATE] and display [FOCUS/IRIS]. Then select either "STANDARD" or "EXCHANGE".

7. FOCUS/IRIS ◆  
STANDARD ↓

When "EXCHANGE" is selected as the setting, focus control and iris control are switched.

When "STANDARD" is selected, the original control is restored.


## ● Setting the PAN/TILT lever inclination and speed

The correlation between angle and operating speed when the PAN/TILT lever is inclined can be adjusted.

From the [SETUP] menu, select [OPERATE] and display [P/T CURV]. Then set the correlation between the lever angle and its operating speed.

8. P/T CURV ◆  
1 ↓

- The higher the value selected, the slower the operating speed.

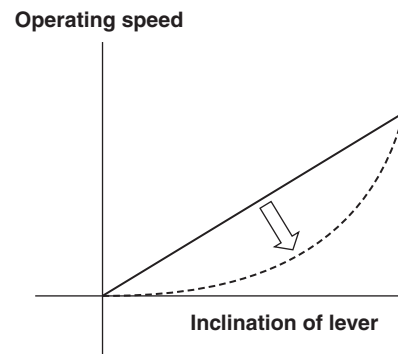

## ● Selecting the target whose operation is to be enabled or disabled using the PT ACTIVE button

Select the target whose operation is to be enabled or disabled using the PT ACTIVE button.

From the [SETUP] menu, select [OPERATE] and display [PT ACTIVE]. Then select the target operation.

9. PT ACTIVE ▲  
P/T ↓

### P/T:

PAN/TILT lever operations

### P/T/Z/F:

PAN/TILT lever, ZOOM button, auto focus button and FOCUS/PUSH OTAF dial operations

# Setting the functions

## ■ Setting the speed at which to move to the position set by the preset memory

The speed at which to move to the position where the remote camera has been set to be in the preset memory when the preset operation is conducted can be set.

From the [SETUP] menu, select [PRESET] and display [DIAG SPEED]. Then set the speed.

The higher the setting, the faster the operating speed.



## ■ Setting the operations to be performed when a preset operation is executed

The operations which the remote camera is to be performed when the preset operation is conducted can be set.

From the [SETUP] menu, select [PRESET] and display [SCOPE]. Then set the operations to be performed.



The operations that the camera performs when a preset operation is executed differ depending on the mode selected.

Mode	Operations performed
MODE A	Pan, tilt, zoom, focus, iris, gain, white balance
MODE B	Pan, tilt, zoom, focus, iris
MODE C	Pan, tilt, zoom, focus

### Note

This function takes effect when the unit is connected to the AW-HE50. It does not work with any other models.

## ■ Returning the remote cameras to their home position

The remote cameras connected can be returned to their home position.


From the [SETUP] menu, select [PRESET] and display [HOME POSITION]. Then press the F2 dial.



## ■ Adjusting the panning, tilting, zooming and focusing speed

The speed is adjusted uniformly for the panning, tilting, zooming and focusing together.

When the PTZ/FOCUS SPEED dial is turned clockwise, the speed is increased; conversely, when it is turned counterclockwise, it is reduced.

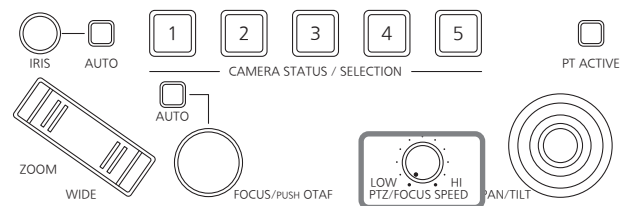

From the [SETUP] menu, select [OPERATE] and display [SPEED TARGET]. If P/T is selected, the speed adjustment is confined to panning and tilting only.

In this case, the zooming and focusing speed is fixed to the speed which was set immediately before P/T was selected.

# Setting the functions

## ■ Setting the movement range of the remote camera (limiter function)

This unit has a limiter function which is a function that limits the movement range of the remote cameras.

There are four limiter positions: the upper, lower, left and right limits of the movement range.

### When the AW-HE50 is used:

Depending on the nature of the AW-HE50's installation location, there may be some subjects inside its movement range which it is not desirable or necessary to shoot. In cases like this, the shooting range of the AW-HE50 can be limited by setting limiters in front of those subjects which are not to be shot.

### When any other remote camera is used:

Depending on the installation position, there may be an obstruction in the movement range, and the remote cameras may come into contact with this obstruction.

If the remote cameras come into contact with an obstruction, trouble or accidents may result.

In cases like this, a limiter can be set in front of the obstruction to prevent contact.


## ● Setting the upper limit

From the [SETUP] menu, select [PTZ ADJ] and display [LIMIT UP]. Then set the upper limit.

The setting that is displayed differs between the AW-HE50 and other remote cameras.


### Display that appears with the AW-HE50

The current setting status is displayed in the LIMIT UP item.

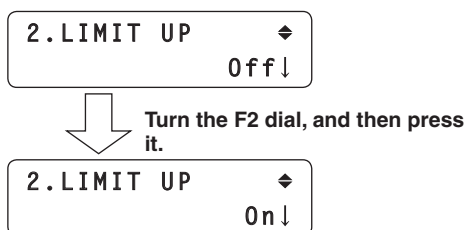

### Display that appears with other remote cameras

The setting status is displayed after the completion of the setting in the LIMIT UP item.

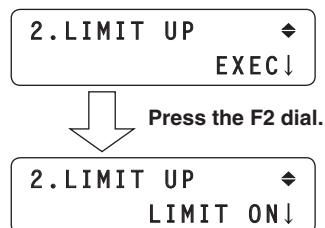


## ● Setting the lower limit

From the [SETUP] menu, select [PTZ ADJ] and display [LIMIT DOWN]. Then set the lower limit.

The setting that is displayed differs between the AW-HE50 and other remote cameras.


### Display that appears with the AW-HE50

The current setting status is displayed in the LIMIT DOWN item.

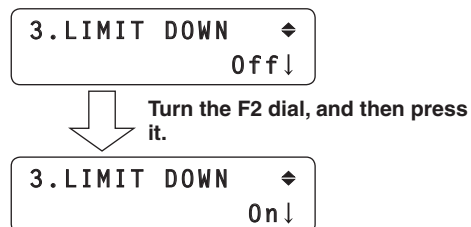

### Display that appears with other remote cameras

The setting status is displayed after the completion of the setting in the LIMIT DOWN item.

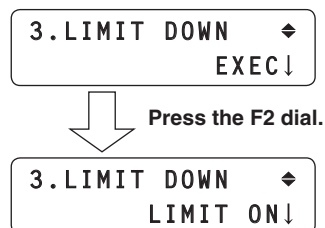



# Setting the functions


## ● Setting the left limit

From the [SETUP] menu, select [PTZ ADJ] and display [LIMIT LEFT]. Then set the left limit.

The setting that is displayed differs between the AW-HE50 and other remote cameras.


### Display that appears with the AW-HE50

The current setting status is displayed in the LIMIT LEFT item.

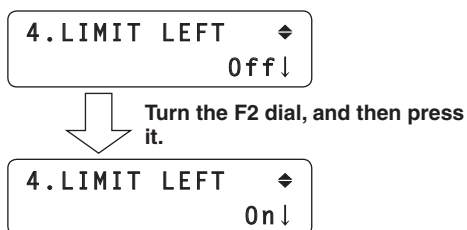

### Display that appears with other remote cameras

The setting status is displayed after the completion of the setting in the LIMIT LEFT item.

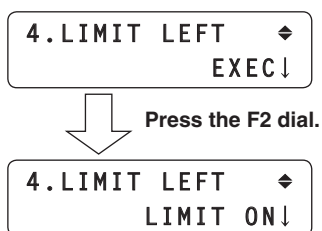


## ● Setting the right limit

From the [SETUP] menu, select [PTZ ADJ] and display [LIMIT RIGHT]. Then set the right limit.

The setting that is displayed differs between the AW-HE50 and other remote cameras.


### Display that appears with the AW-HE50

The current setting status is displayed in the LIMIT RIGHT item.

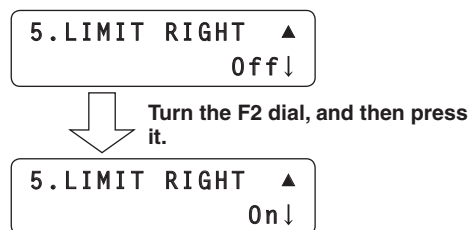

### Display that appears with other remote cameras

The setting status is displayed after the completion of the setting in the LIMIT RIGHT item.

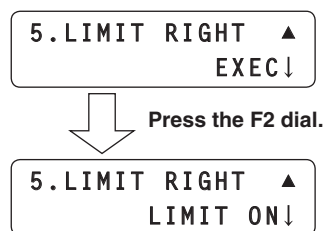

# Setting the functions

## ■ Controlling the peripheral devices connected to the remote cameras

When any of the peripheral devices listed below are connected to the remote cameras, they can be controlled.

- ND filter
- AC adaptor (AW-PS300A)
- Defroster
- Wiper
- Heater, fan
- Halogen lamp

Control is exercised using the FUNCTION item of the [SETUP] menu.

[6] FUNCTION

### ■ Controlling an ND filter

This item is used to control the ND filter when using a lens with an ND filter function on the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [ND FILTER]. Then select ND filter control.

1. ND FILTER  
Off↓

### ■ Controlling an AC adaptor (AW-PS300A)

This item is used to control shorting and releasing of the OPTION SW CONTROL OUT connector when using an AC adaptor (AW-PS300A) for the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [OPTION]. Then select shorting or releasing.

2. OPTION  
Off↓

### ✎ Memo ✎

It is also possible to control the switching from normal shooting to night vision shooting (night vision shooting using infrared illumination) or vice versa for a camera\*1 which features the night mode function.

\*1: Compatible camera: AW-HE60 (as of December 2012)

### ■ Controlling a defroster

This item is used to control a defroster when using a remote camera (AW-PH650 + camera) equipped with a defroster function as the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [DEFROSTER]. Then select defroster On or Off.

3. DEFROSTER  
Off↓

### ■ Controlling a wiper

This item is used to control a wiper when using a remote camera (AW-PH650 + camera) equipped with a wiper function as the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [WIPER]. Then select wiper On or Off.

4. WIPER  
Off↓

### ■ Controlling a heater/fan

This item is used to control a heater/fan when using a remote camera (AW-PH650 + camera) equipped with a heater or fan function as the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [HEATER/FAN]. Then select heater/fan On or Off.

5. HEATER/FAN  
Off↓

### ■ Controlling a halogen lamp

This item is used to control the lighting (On) and extinguishing (Off) of the halogen lamp when a halogen lamp has been connected to the currently selected remote camera.

From the [SETUP] menu, select [FUNCTION] and display [LAMP]. Then select halogen lamp lighting (On) and extinguishing (Off).

6. LAMP  
Off↓

# Setting the functions

## ■ Adjusting the minimum lens zoom start speed

This adjustment ensures that the lens zoom will start moving smoothly in line with the inclination of the ZOOM button when operating the lens zoom using the ZOOM button.

From the [SETUP] menu, select [PTZ ADJ] and display [Z MIN SPEED]. Then turn the F2 dial to set the compensation amount.



The lowest compensation amount is “1”, and the highest is “8”.

No compensation is provided at the “Off” setting. While observing the images on a monitor, hold down the ZOOM button slowly, and check whether the lens zoom starts moving smoothly.

## ■ Exercising external control over the preset memory data

Preset numbers can be assigned to execute presets for the selected remote cameras when signals have been input to the TALLY/GPI input/output connector.

The presets are assigned using the GPI item on the [SETUP] menu.



### ■ Setting the preset numbers

From the [SETUP] menu, select [GPI], and display [PRESET CTL1], [PRESET CTL2] or [PRESET CTL3]. Then set the camera number and preset number.



Any camera number from “CAM1” to “CAM100” or “ALL” can be selected.

- If “ALL” has been selected, it will not be possible to execute the preset operations for any remote cameras which have been set to “NoAssign” as the connection setting.
  - ☞ Refer to “Settings for connection with the remote cameras” (<Basics> Operating Instructions).

The preset number setting can be established for each GPI input.

- Input1: PRESET CTL1
- Input2: PRESET CTL2
- Input3: PRESET CTL3

## ■ Locking the button operations

This disables the operation of the CAMERA OSD button and PRESET MEMORY/MENU buttons (1 to 7).

The button operations are locked using the MENU CTL item of the [SETUP] menu.



### ■ Setting button operation enable or disable

From the [SETUP] menu, select [MENU CTL] and display [MENU CONTROL]. Then set button operation enable or disable.



When “DISABLE” is selected, the following button operations are disabled:

- CAMERA OSD button
- PRESET MEMORY/MENU 1 to 7 buttons (However, these buttons can still be used to execute preset settings.)

## ■ Adjusting the LCD panel backlight

The backlight of the LCD panel can be adjusted.

Make this adjustment using the LCD BL item on the [SETUP] menu.



### ■ Adjusting the backlight

From the [SETUP] menu, select [LCD BL] and display [BACKLIGHT]. Then set whether the backlight is to be turned on or off.



# Setting the functions


## Switching the camera group

### 1 Assign CAM\_GROUP SEL to a USER button.

Refer to “Setting the USER buttons” for details about assigning functions to the USER buttons.

### 2 Press the USER button assigned with CAM\_GROUP SEL.

The USER button turns on, allowing you to select the camera group.

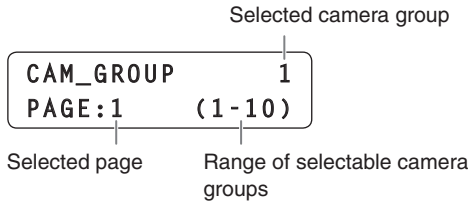

- Page 1 is always displayed when the USER button is pressed.

### 3 Switch the camera group using the PRESET MEMORY/MENU buttons (1 to 10).

Camera groups 1 to 10 can be selected.

- If you press the PAGE button and then the PRESET MEMORY/MENU buttons (1 to 10), camera groups 11 to 20 can be selected.



## Setting the rotation direction of the iris dial and the operation during AWB and ABB execution

- The following settings can be changed from [OPERATE] of the [SETUP] menu.

Menu item	Details of operation performed
IRIS DIR	Set the rotation direction of the IRIS dial for adjusting the iris. NORMAL (CLOSE to OPEN by clockwise rotation) REVERSE (CLOSE to OPEN by counterclockwise rotation)
AWB/ABB & P/T	Set whether or not to enable the pan/tilt, zoom, and focus operations during auto white balance (AWB) or auto black balance (ABB) execution. DISABLE (operations not possible) ENABLE (operations possible)

### Note

If the pan/tilt operation is performed during AWB execution, an error may occur with AWB depending on the image that is shown.

## Switching the ND filter

- This feature is available on AK-HC1500, AK-HC1800, and AW-HE120 cameras.

### 1 Assign ND\_FILTER to a USER button.

Refer to “Setting the USER buttons” for details about assigning functions to the USER buttons.

### 2 Press the USER button assigned with ND\_FILTER.

The USER button turns on, and the value of the currently selected ND filter is displayed on the LCD panel.

The corresponding PRESET MEMORY/MENU button (1 to 4) is lit.

PRESET MEMORY/MENU button	ND filter value
1	AK-HC1500, AK-HC1800: Clear AW-HE120: Through
2	AK-HC1500, AK-HC1800: 1/4 AW-HE120: 1/4
3	AK-HC1500, AK-HC1800: 1/16 AW-HE120: 1/16
4	AK-HC1500, AK-HC1800: 1/64 AW-HE120: 1/64

### 3 Switch the ND filter using the PRESET MEMORY/MENU buttons (1 to 4).

The corresponding PRESET MEMORY/MENU button (1 to 4) is lit, and the value of the ND filter is displayed on the LCD panel.



# Setting the functions

## ■ Linking to the AW-SF100 auto tracking software

The tracking function of the AW-SF100 auto tracking software for remote cameras can be enabled or disabled.

- You can assign the following functions under [SETUP] menu → [USER] → [USER1] or [USER2].

Menu item	Details of operation performed
TRACKING	Set auto tracking for the auto tracking software to ON (start) or OFF (stop). Use this when you want to start (ON) or stop (OFF) auto tracking from the auto tracking software on the target camera. ON (lit) OFF (off)
TR CONNECT	Set connection from the auto tracking software to the target camera to ON (connect) or OFF (disconnect). Use this when you want to connect or disconnect the target camera for auto tracking from the auto tracking software. This must be set to ON before starting or stopping auto tracking (i.e., setting TRACKING to ON or OFF). ON (lit) OFF (off)

- You can enable connection to the auto tracking software under [SYSTEM] menu → [TR CTRL].

Menu item	Details of operation performed
TRACKING	<b>NoAssign Network</b> Select [Network] to enable connection to the auto tracking software.

- You can configure the IP address and port number for the auto tracking software to which to connect under [SYSTEM] menu → [TR IP ADR] → [IP] and [PORT].

### Notes

- Make sure that the IP address configured in [TR IP ADR] is different from the IP addresses of cameras and linked switchers. Otherwise, proper control will not be possible.
- Up to 10 cameras can be configured on the auto tracking software. To simplify equipment management, we recommend identical camera number and IP address assignment settings on both the unit and the auto tracking software. The camera numbers that can be used for the cameras tracked and linked by the unit are CAM1 to CAM10.

Configuration example:

REMOTE CAMERA	AW-RP50			AW-SF100 auto tracking software	
	GROUP	CAM	CAMERA IP Address	ID	CAMERA IP Address
1	1	1	192.168.0.10	CAM1	192.168.0.10
•			•		•
•			•		•
5	2	5	192.168.0.14	CAM5	192.168.0.14
6		6	192.168.0.15	CAM6	192.168.0.15
•			•		•
•			•		•
10		10	192.168.0.19	CAM10	192.168.0.19

# Setting linkup with the switcher

This setting is used to link the unit with an optional switcher (AW-HS50).

To link the unit with the switcher, the following settings must be established in the unit.

## IP address (switcher) setting

[SYSTEM] menu → [SW IP ADR]

## Assign information setting

[SYSTEM] menu → [SW CTL]

## Link connection setting

[SETUP] menu → [SW LINK] → [SWLINK]

## Settings at the switcher

For details on the settings selected at the switcher, refer to the Operating Instructions of the switcher.

## Switcher network settings

### 1 Set the MENU button to ON.


Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 10 button (SYSTEM) to ON.

When the button is pressed and its indicator is lighted, the [SYSTEM] menu is displayed on the LCD panel.




### 3 Turn the F1 dial, display the SW IP ADR menu, and press the F1 dial.

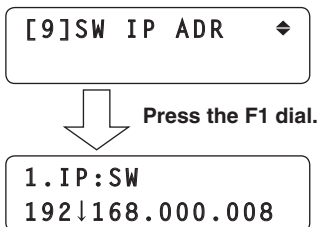


### 4 Turn the F2 dial, select the IP address, and then press the F2 dial to enter the selection.

Set the IP address which has been set in the switcher.

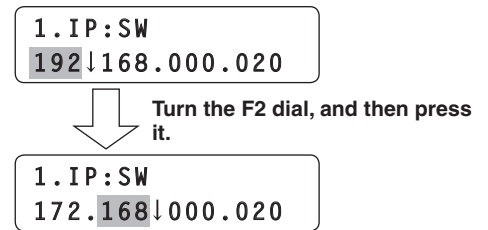

Input the IP address in four blocks of numerals. When input advances to the last block and the F2 dial is pressed, the IP address is entered.




### 5 Press the EXIT button.


Operation now returns to the SW IP ADR menu.



### 6 Turn the F1 dial to display the SW CTL menu, and press the F1 dial.

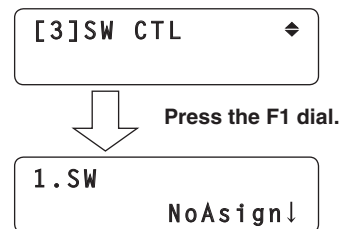

### 7 Turn the F2 dial to select "Network", and then press the F2 dial to enter the selection.



# Setting linkup with the switcher

---

## ■ Link setting

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 9 button (SETUP) to ON.

When the button is pressed and its indicator is lighted, the [SETUP] menu is displayed on the LCD panel.



### 3 Turn the F1 dial, display the SW LINK menu, and press the F1 dial.



Press the F1 dial.



### 4 Turn the F2 dial to select On, and then press the F2 dial to change the setting.



When "On" is selected as the item setting, the settings mentioned below take effect, and the link with the switcher is established.

Control can also be exercised by assigning this setting to a USER button.

# Setting the functions when the unit is linked with the switcher

Set the various functions to be used when the unit is linked with the switcher.

## ■ Setting the image output and image input

This setting establishes the correlation between the image output (remote camera) and image input (switcher). By establishing the setting, the switcher is notified if a remote camera which has been set is selected when the remote cameras have been selected by the unit.

### 1 Set the MENU button to ON.


Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 10 button (SYSTEM) to ON.


When the button is pressed and its indicator is lighted, the [SYSTEM] menu is displayed on the LCD panel.




### 3 Turn the F1 dial, display the SW ASSIGN menu, and press the F1 dial.

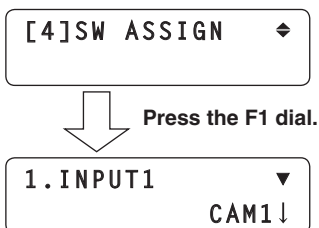

### 4 Turn the F1 dial to select the input line of the switcher.

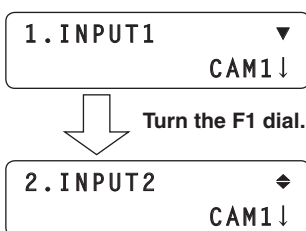

### 5 Turn the F2 dial, select the remote camera, and then press the F2 dial to enter the selection.

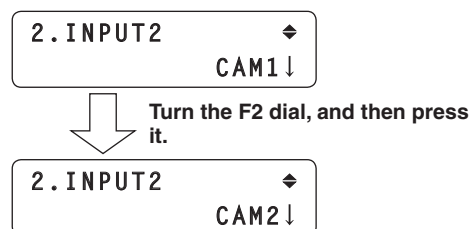

The switcher has five input lines: INPUT1 to INPUT5. Take the above steps to set the remote cameras for the input lines, and then operate the remote cameras.

- Select "NoAssign" if the switcher is not to be notified of the correlation setting when the remote cameras have been selected.



# Setting the functions when the unit is linked with the switcher

## Switcher settings

A setting for controlling the switcher linked with the unit is available.

It is established using the [SETUP] menu.

Before taking the steps described here, the steps for “Switcher network settings” and “Setting the image output and image input” must be taken.

First, the basic menu operations will be described.

### 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 9 button (SETUP) to ON.

When the button is pressed and its indicator is lighted, the [SETUP] menu is displayed on the LCD panel.




### 3 Turn the F1 dial, display the SW LINK menu, and press the F1 dial.



### 4 Turn the F1 dial to select the menu item to be set.



### 5 Turn the F2 dial, select the settings, and then press the F2 dial to change the setting.



## Bus switching

From the [SETUP] menu, select [SW LINK] and display [BUSCONT]. Then select On or Off.



When “On” is selected as the item setting, the materials set using the BUS item (described later) are sent from the remote camera to the switcher when the remote cameras has been selected using one of the unit’s CAMERA STATUS/SELECTION buttons.

Control can also be exercised by assigning this setting to a USER button.

# Setting the functions when the unit is linked with the switcher

## Bus setting

From the [SETUP] menu, select [SW LINK] and display [BUS]. Then set the material (AUX, PVW, PinP or KEY) to be sent to the switcher.



The materials set using this item are sent from the remote camera to the switcher when the remote camera has been selected using one of the unit's CAMERA STATUS/ SELECTION buttons.

Control can also be exercised by assigning this setting to a USER button (BUSCONT).

## Focus assist setting

From the [SETUP] menu, select [SW LINK] and display [FASIST]. Then set On or Off.



When "On" is selected as this item's setting, the images of the AUX bus output from the switcher will be switched to the images of the remote camera selected by the unit. Conversely, when "Off" is selected, the switcher will switch the images of the AUX bus output from the switcher to the images of its multi view display.

## Camera information setting

From the [SETUP] menu, select [SW LINK] and display [CAMSEL]. Then set On or Off.



When "On" is selected as the item setting, an icon appears at the bottom left of the image of the remote camera selected by the unit on the switcher's multi view display. When a remote camera has been selected, its information is sent from the unit to the switcher.

## OA tally setting

From the [SETUP] menu, select [SW LINK] and display [TALLY\_IP]. Then set On or Off.




When "On" is selected as the item setting, the unit receives the tally information (tally ON/OFF) sent periodically from the switcher through the network, and it sends the ON or OFF instruction to the remote cameras in which changes have occurred.

### [Concerning the tally information transferred through the network]

After receiving the tally information (Input1 to Input5) from the switcher through the network, the unit sends the ON or OFF instruction to the remote cameras.

Based on the relationship between the image output (remote camera) and image input (switcher) which have been set using the unit's menu, the remote camera to which the tally instruction is sent in response to the tally information received from the switcher is identified, the tally indicator of that remote camera is lighted in red, and the tally ON instruction is sent to the remote camera.

The Tally ON instruction is also sent to the remote cameras which are not in the selected camera group.

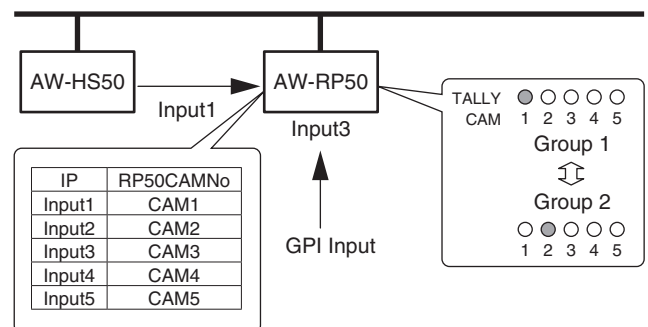

In response to inputs 1 to 5 from GPI Input, tally indicators CAM1 to CAM5 are lighted in red, and the tally ON instruction is sent to the remote cameras concerned. Only CAM1 to CAM5 serve as the GPI Input tally. This means that when a camera group other than No.1 is selected, the tally indicators will go off.

# Setting the functions when the unit is linked with the switcher

The following tally-related settings can be established using the menu.

- Enabling/disabling the tally information instructions sent over the network**  
 If only the tally information from GPI is to be enabled, from the [SETUP] menu select [SW LINK], set [TALLY\_IP] to Off, and disable the tally information instructions sent over the network.
- Enabling/disabling the tally ON instructions sent to the remote cameras**  
 From the [CAMERA] menu, select [TALLY] and display [TALLY OUT]. Then set enable or disable for the tally ON instructions to be sent to the remote cameras in response to the tally requests from the GPI and over the network.

## Setting the control application of PAN/TILT lever and ZOOM button

Set the control application of the unit's PAN/TILT lever and ZOOM button.

From the [SETUP] menu, select [SW LINK] and display [P/T LEVER]. Then set Self, SW or Button Select.



### When the “Self” is selected:

The unit's PAN/TILT lever and ZOOM button can be used to control the remote cameras.

- PAN/TILT lever:** Remote camera panning and tilting
- ZOOM button:** Remote camera zooming

- Holding down the PT ACTIVE button at this setting switches the PAN/TILT lever operations between “enabled” (the PT ACTIVE button indicator lights) and “disabled” (the PT ACTIVE button goes off).  
 (The ZOOM button operations are enabled: When [OPERATE] has been set from the [SETUP] menu, and then [P/T] has been selected as the [PT ACTIVE] setting.)

### When the “SW” is selected:



The following information can be sent to the switcher.

- PAN/TILT lever:** X, Y
- ZOOM button:** Size

- Holding down the PT ACTIVE button at this setting switches the PAN/TILT lever operations between “enabled” (the PT ACTIVE button indicator blinking) and “disabled” (the PT ACTIVE button goes off).  
 (The ZOOM button operations are disabled.)

### When the “Button Select” is selected:

Switching between the “Self” and “SW” settings can be accomplished using the PT ACTIVE button. Each time the PT ACTIVE button is held down, the lighting status of the PT ACTIVE button indicator changes, and the control application of PAN/TILT lever and ZOOM button is switched.

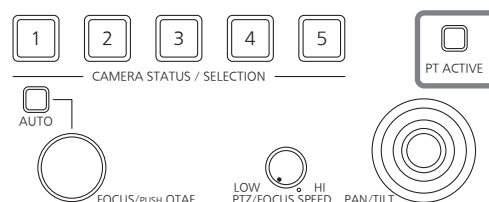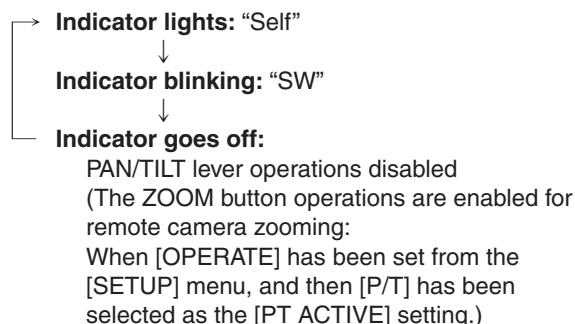

# Setting the functions when the unit is linked with the switcher

## ■ Setting for the information to be displayed on the OSD

This setting displays the remote camera information on the OSD of the monitor which is connected to the switcher to be linked to the unit.

The setting is established using the [SETUP] menu. Before taking the steps here, the steps for “Switcher network settings” and “Setting the image output and image input” described earlier must be taken.

First, the basic menu operations will be described.

### 1 Set the MENU button to ON.


Press the MENU button to light its indicator.

### 2 Set PRESET MEMORY/MENU 9 button (SETUP) to ON.


When the button is pressed and its indicator is lighted, the [SETUP] menu is displayed on the LCD panel.




### 3 Turn the F1 dial to display the SW DISP menu, and press the F1 dial.

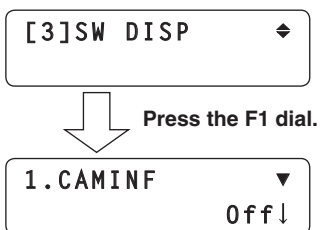

### 4 Turn the F1 dial to and select the menu item to be set.

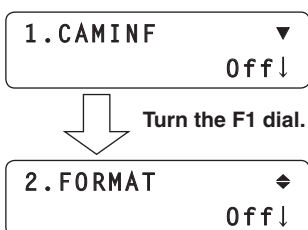

### 5 Turn the F2 dial to select On or Off, and then press the F2 dial to enter the selection.

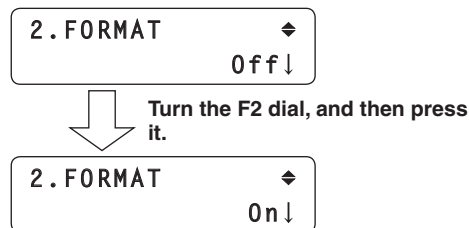

## ● Setting all the information displays together


From the [SETUP] menu, select [SW DISP] and display [CAMINF]. Then set On or Off.



When “On” is selected as the item setting, the information of the remote cameras set in “Setting the image output and image input” is sent to the switcher.

Control can also be exercised by assigning this setting to a USER button.

- ① Video format  
(This is left blank when the video format of the remote camera cannot be recognized.)
- ② Scene file name (shooting mode)
- ③ Filter information
- ④ Remote camera alarm information
- ⑤ Shutter information (ON/OFF, shutter value)
- ⑥ Gain value
- ⑦ Iris value
- ⑧ Remote camera name  
(displayed with up to 10 characters)

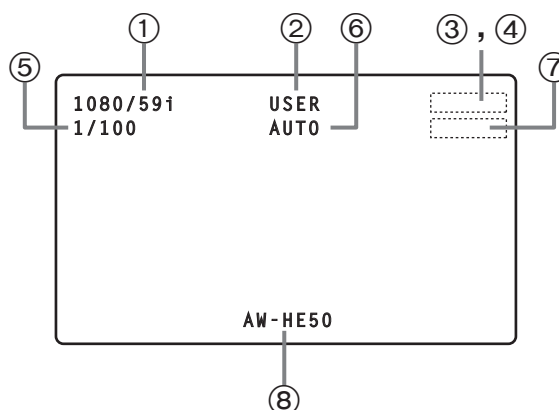

# Setting the functions when the unit is linked with the switcher

## ● Setting each information item to be displayed

### ■ Video format

From the [SETUP] menu, select [SW DISP] and display [FORMAT]. Then set On or Off.

2. FORMAT    ◆  
Off↓

### ■ Remote camera name

From the [SETUP] menu, select [SW DISP] and display [CAMNAME]. Then set On or Off.

3. CAMNAME    ◆  
Off↓

### ■ Scene file name

From the [SETUP] menu, select [SW DISP] and display [SCENE]. Then set On or Off.

4. SCENE    ◆  
Off↓

### ■ Gain value

From the [SETUP] menu, select [SW DISP] and display [GAIN]. Then set On or Off.

5. GAIN    ◆  
Off↓

### ■ Shutter information

From the [SETUP] menu, select [SW DISP] and display [SHUTTER]. Then set On or Off.

6. SHUTTER    ◆  
Off↓

### ■ Iris value

From the [SETUP] menu, select [SW DISP] and display [IRIS]. Then set On or Off.

7. IRIS    ◆  
Off↓

### ■ Filter information

From the [SETUP] menu, select [SW DISP] and display [FILTER]. Then set On or Off.

8. FILTER    ◆  
Off↓

### ■ Remote camera alarm information

From the [SETUP] menu, select [SW DISP] and display [ALARM]. Then set On or Off.

9. ALARM    ▲  
Off↓

# Checking the equipment alarm information

It is possible to check the alarm statuses of the unit and the remote cameras assigned to the CAMERA STATUS/SELECTION buttons.

## 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

## 2 Set PRESET MEMORY/MENU 10 button (SYSTEM) to ON.

When the button is pressed and its indicator is lighted, the [SYSTEM] menu is displayed on the LCD panel.

[1]CAMERA CTL ▼

## 3 Turn the F1 dial to display the ALARM menu, and press the F1 dial.

[10]ALARM ◆



Press the F1 dial.

1. POWER ▼  
No ALARM↓

## 4 Turn the F1 dial to select the unit (POWER) or remote camera item (CAM1 to CAM100).

The alarm status is displayed underneath.

1. POWER ▼  
No ALARM↓



Turn the F2 dial.

2. CAM1 ◆  
FAN ALM↓

### [Select POWER]

The unit's power supply alarm can be checked.

#### No ALARM:

When the power supply is trouble-free.

#### ALARM:

When trouble has occurred in the power supply.

### [Select CAM1 to CAM100]

The alarm statuses of the remote cameras currently assigned to the CAMERA STATUS/SELECTION buttons are displayed.

#### No ALARM:

Trouble-free.

#### FAN ALM:

Trouble has occurred in the cooling fan.

#### P/T ALM:

Trouble has occurred in the pan/tilt operation.

#### FAN ALM+P/T ALM:

Trouble has occurred in the cooling fan and pan/tilt operation.

### Note

When an alarm has occurred, stop operation immediately, and be absolutely sure to contact your dealer.

Continued use may cause the unit to malfunction.

# Returning the unit to its factory status

The unit's settings can be returned to the factory statuses. Two methods can be used: One method returns all the settings to the factory statuses, and the other returns only the [SETUP] menu settings to the factory statuses.

## 1 Set the MENU button to ON.

Press the MENU button to light its indicator.

## 2 Set PRESET MEMORY/MENU 10 button (SYSTEM) to ON.

When the button is pressed and its indicator is lighted, the [SYSTEM] menu is displayed on the LCD panel.



## 3 Turn the F1 dial to display the INITIALIZE menu, and press the F1 dial.



## 4 Turn the F2 dial to select the initializing mode.



### ALL:

The settings controlled by the unit are returned to the factory statuses.

### SETUP:

Only the settings on the menus below are returned to the factory statuses.

[CAMERA] menu	
[2]	POWER
[3]	TALLY
[SETUP] menu	
[1]	USER
[2]	SW LINK
[3]	SW DISP
[4]	OPERATE
[5]	PRESET
[8]	GPI
[9]	LCD BL
[10]	MENU CTL

## 5 Press the F2 dial to initialize the settings.

# Control interface for external devices

## ■ TALLY/GPI


TALLY IN 1 to TALLY IN 5 are contact input ports which are used to light the unit's tally indicators (above the CAMERA STATUS/SELECTION buttons).

The tally lamps light with contact input.

GPI IN 1 to GPI IN 4 are contact input ports which are used to control the unit from an external source.

GPI OUT 1 to GPI OUT 4 are open output ports which are used to output the statuses to an external source.

(D-sub 15-pin, female, inch thread)




Pin No.	Signal	Description of signal	Operation
1	TALLY IN 1	CAM1 tally input	Contact input
9	TALLY IN 2	CAM2 tally input	
2	TALLY IN 3	CAM3 tally input	
10	TALLY IN 4	CAM4 tally input	
3	TALLY IN 5	CAM5 tally input	
11	GND	Ground	
4	GPI IN 1	Preset input 1	Contact input
12	GPI IN 2	Preset input 2	
5	GPI IN 3	Preset input 3	
13	GPI IN 4	Panel lock	
6	GPI OUT 1	Remote camera selection 0 *	Open collector output
14	GPI OUT 2	Remote camera selection 1 *	
7	GPI OUT 3	Remote camera selection 2 *	
15	GPI OUT 4	Alarm	
8	NC	Not used	

### Example of GPI OUT connections

Ensure that the conditions given below are satisfied.


Dielectric strength: Max. DC 24 V

Current: Max. 50 mA

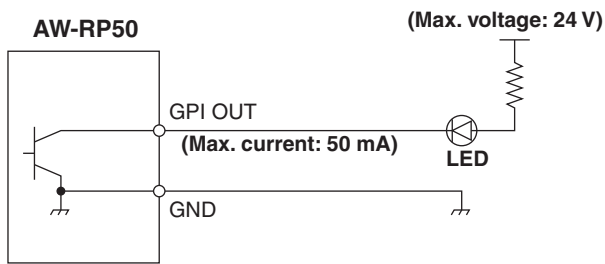

### Example of TALLY IN and GPI IN connections

Provide contact inputs.

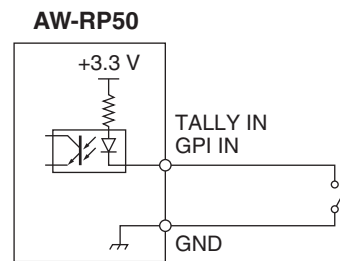

\*: The selection statuses (CAMERA STATUS/SELECTION buttons 1 to 5) of the remote cameras can be monitored at GPI OUT 1 to GPI OUT 3.

CAMERA STATUS/SELECTION button	Remote camera selection 0 (GPI OUT 1)	Remote camera selection 1 (GPI OUT 2)	Remote camera selection 2 (GPI OUT 3)
1	On	Off	Off
2	Off	On	Off
3	On	On	Off
4	Off	Off	On
5	On	Off	On



# Setup Software

The “Setup Software” is an application which enables the same functions as the unit’s automatic IP settings to be executed from the host computer.

This is used to set the network environment for operating the remote camera using the host computer.

It can save the setting data files in the host computer, and it can load the saved files and reflect them in the network environment.

For details, refer to the sections that follow.

## Notes

**When the settings are to be selected at the host computer using the “Setup Software”:**

- Do not perform the operation at the unit.
- Do not start up the “Setup Software” in any other computer in the same network.
- Do not use the “Easy IP Setup Software” which is provided with the AW-HE50.

## ■ Installing the software

This section describes how to install the Setup Software.

1. Download the “Setup Software” from the following website.  
<https://pro-av.panasonic.net/>
2. Double-click “RP50Tool.exe” in the “Setup Software” folder you downloaded to start the Setup Software.


## ■ IP settings

On the “Setting” tab screen, set the IP addresses of the remote cameras and switcher.

Type	Group	CAMERA No	Type	CAMERA Name	SW Input	MAC Address	IP Address	HTTP Port	CAMERA Select	Alarm	
CAMERA	1	C001	NoAssign		NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0			
		C002	NoAssign		NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0			
		C003	NoAssign		NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0			
		C004	NoAssign		NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0			
		C005	NoAssign		NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0			
	2	C006	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C007	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C008	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C009	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C010	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
	3	C011	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C012	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C013	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
		C014	NoAssign		NoAssign	NoAssign	00:00:00:00:00:00	0 . 0 . 0 . 0	0		
	SW		NoAssign			00:00:00:00:00:00	0 . 0 . 0 . 0				

# Setup Software

## ● Displaying the “Setting” tab

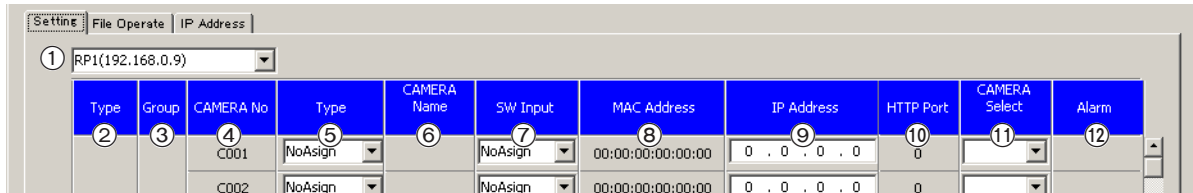

### ① List box

The IP address of the AW-RP50 connected to the network is displayed here.  
The information of the network environment established by the AW-RP50 selected here is displayed on the “Setting” tab.

### ② Type

The units connected to the selected AW-RP50 are displayed in this column.

**CAMERA:** Remote camera  
**SW:** Switcher

### ③ Group

The numbers of the groups of cameras controlled by the selected AW-RP50 are displayed in this column.

### ④ CAMERA No

The numbers of the cameras controlled by the selected AW-RP50 are displayed in this column.

### ⑤ Type

The connection methods used for the units connected to the selected AW-RP50 are displayed in this column.

**Serial:** Serial connection  
**Network:** IP connection  
**NoAssign:** No setting (default setting)

The connection method can be changed manually. Click  on the right, and select “Serial,” “Network” or “NoAssign”.  
“Serial” can be selected only with Group 1.  
After the method has been changed, click the [SET] button to reflect the change.

### ⑥ CAMERA Name

The names of the cameras set in the remote cameras are displayed in this column.  
They are displayed for the remote cameras in the currently selected group.  
For remote cameras with a serial connection, they are displayed only when the cameras are selected by the unit.

### ⑦ SW Input

The input connectors of the switcher are displayed in this column.

The input connector can be changed manually. Click  on the right, and select “NoAssign” or an input connector from “INPUT1” to “INPUT5.”  
After the connector has been changed, click the [SET] button to reflect the change.

### ⑧ MAC Address

The MAC addresses of the remote cameras and switcher connected to the selected AW-RP50 are displayed in this column.

### ⑨ IP Address

The IP addresses of the remote cameras and switcher connected to the selected AW-RP50 are displayed in this column.

The IP addresses can be changed by inputting them directly. After inputting an IP address, click the [SET] button to reflect the change.

### ⑩ HTTP Port

The numbers of the ports used to connect the selected AW-RP50 are displayed in this column.

### ⑪ CAMERA Select

The numbers of the cameras to be changed are displayed in this column.

The numbers of the cameras can be changed manually. Click  on the right, and select a number from “C001” to “C100.”  
After the camera number has been changed, click the [SET] button to reflect the change.

### ⑫ Alarm

The alarm information of the remote cameras is displayed in this column.

They are displayed for the remote cameras in the currently selected group.  
For remote cameras with a serial connection, they are displayed only when the cameras are selected.

# Setup Software

## ● Auto IP setting

### ■ When IP addresses are to be changed

#### 1 Click [RENEW].

New IP addresses are set in the target remote cameras and switcher.

- When [CANCEL] is clicked, the original settings are restored.

#### 2 Check that the IP addresses of the remote cameras and switcher are displayed correctly, and click [SET].

The IP addresses which have been set now take effect.

### ■ When IP addresses are not going to be changed

#### 1 Click [KEEP].

The IP addresses of the target remote cameras and switcher are displayed.

- When [CANCEL] is clicked, the original settings are restored.

#### 2 Check that the IP addresses of the remote cameras and switcher are displayed correctly, and click [SET].

The displayed IP addresses now take effect.

## ● Changing the IP addresses

The IP addresses of the remote cameras and switcher can be changed.

#### 1 Directly input the IP address of the device concerned into the [IP Address] box.

#### 2 Click [SET].

The changed IP address now takes effect.

## ● Changing the camera numbers

The camera numbers set for the remote cameras can be changed.

#### 1 Change the camera number for the remote camera concerned in the [CAMERA Select] box.

#### 2 Click [SET].

The changed camera number now takes effect.

## ● Registering the camera numbers in the switcher's input connectors

Set the camera numbers to be registered for the input connectors (SDI IN 1 to SDI IN 4, DVI IN) of the switcher.

#### 1 Select the camera numbers to be registered in the [SW Input] box.

SW Input display	Input connector of switcher
Input1	SDI IN 1 to SDI IN 4, DVI IN
Input2	
Input3	
Input4	
Input5	

#### 2 Click [SET].

The registration of the camera numbers into the input connectors of the switcher now takes effect.

## ● Initializing the IP addresses

The set IP addresses are initialized when [ALL CLEAR] is clicked.

## ● Acquiring information

When [REFRESH] is clicked, the latest information of the remote cameras and switcher is acquired, and displayed in the "Setting" tab.

# Setup Software

## ■ Saving and loading data

On the “File Operate” tab screen, you can save and load files in which the AW-RP50 settings are stored.

**● Loading the setting files**  
Load a file in which the AW-RP50 settings are stored. (Filename: \*\*\*.r50)

- 1 Click [File], and specify the setting file to be loaded.**  
The name of the selected file is displayed in the text box.
  - It is also possible to input the filename directly.
- 2 Click [Load].**  
When the file has been loaded, a message is displayed to alert the user to the fact that loading is completed.

**● Saving the setting files**  
Save the AW-RP50 settings in a file. (Filename: \*\*\*.r50)

- 1 Click [Save].**  
The file save screen now appears.
- 2 Input the filename, and click [Save].**

**● Saving the log files**  
Save the log files. (Filename: RP50.log)

- 1 Click [Save].**  
The file save screen now appears.
- 2 Specify the save destination and filename, and click [Save].**

### Memo

If the same information on the settings for the connections with the remote cameras is shared among a multiple number (up to 5 units) of AW-RP50 remote camera controllers on the same network, perform the steps in “Saving the setting files” (Save) to save the information which has been set in one AW-RP50 unit.

Then return to the “Setting” tab screen, and in the list box select the unit whose setting data is to be reflected.

On the “File Operate” tab screen again, the data can now be reflected by performing the steps in “Loading the setting files” (Load).

### Notes

- When the version of the AW-RP50 unit’s software is updated, the items inside the setting files which are stored from the AW-RP50 may be added.  
The software version (system version) can be checked by selecting [SYSTEM] menu → [VERSION] → [SYSTEM VER].
- The same setting files which were stored before the software version is updated can be loaded by the AW-RP50 after the software version was updated.  
(The same settings prior to the file loading remain in place for those items which were added by the AW-RP50 after the software version was updated.)

**Example of when files can be loaded**

The setting files stored using system version V.2.03.05 can be loaded by AW-RP50 with system version V.2.04.09.

- When setting files stored after the software version was updated are loaded by the AW-RP50 before the software version is updated, a popup display indicating “Write Error” appears for Setup Software, and the files may fail to be loaded.

**Example of when files cannot be loaded**

The setting files stored using system version V.2.04.09 cannot be loaded by AW-RP50 with system version V.2.03.05.


In cases like this, first update the version of the software in the AW-RP50 unit in which the setting files are to be loaded, and then try loading the files again. For further information on updating the software version, consult your dealer.

# Setup Software

## ■ Referencing the network environment

On the “IP Address” tab, it is possible to select the IP addresses of the other AW-RP50 remote camera controllers which have been connected in the network.


The information of the network environment created by the selected AW-RP50 units can be referenced using the “Setting” tab. Up to five AW-RP50 units can be selected.

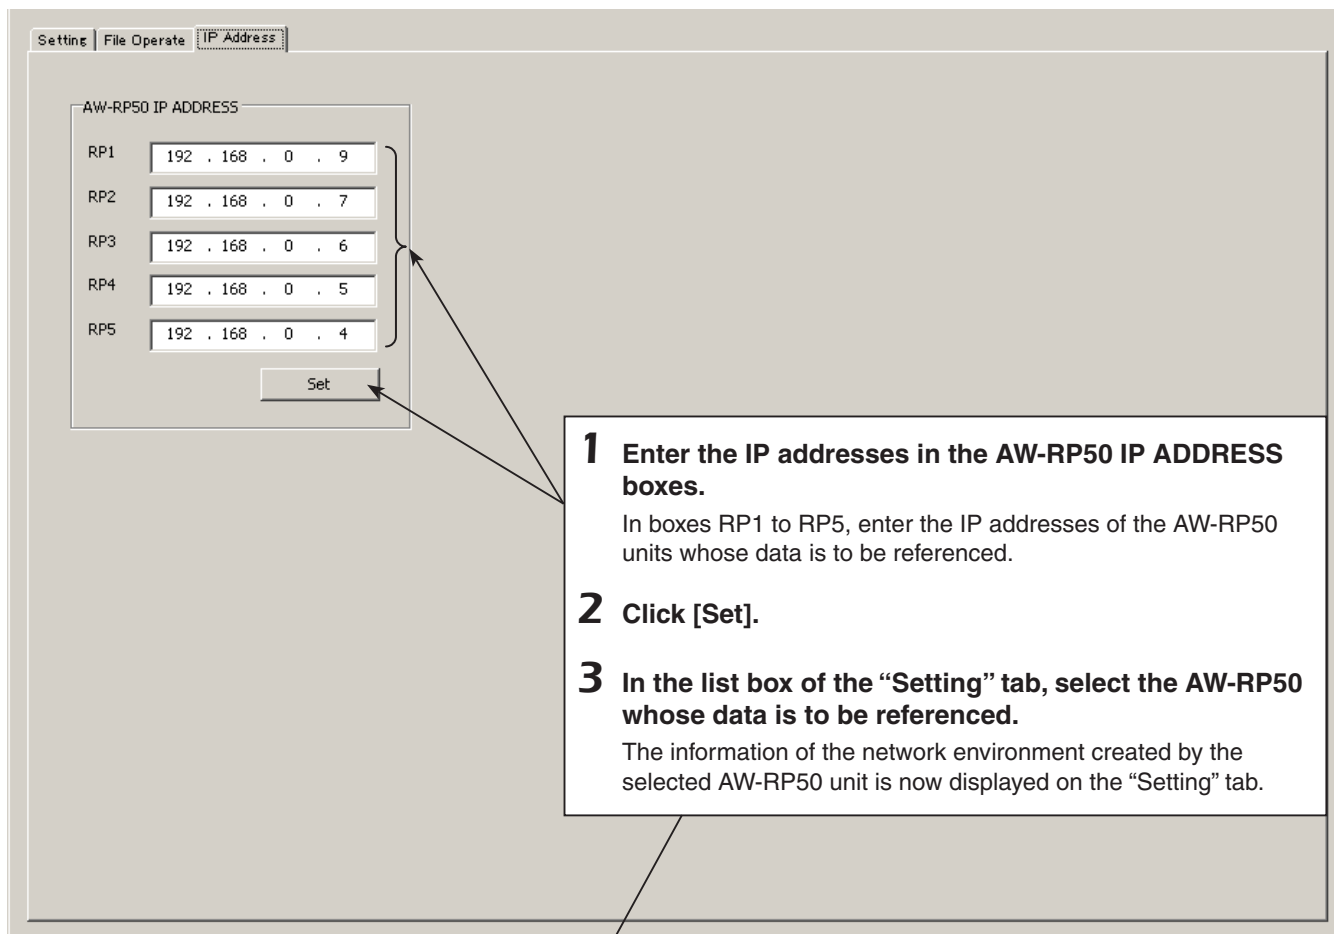

**1 Enter the IP addresses in the AW-RP50 IP ADDRESS boxes.**  
In boxes RP1 to RP5, enter the IP addresses of the AW-RP50 units whose data is to be referenced.

**2 Click [Set].**

**3 In the list box of the “Setting” tab, select the AW-RP50 whose data is to be referenced.**  
The information of the network environment created by the selected AW-RP50 unit is now displayed on the “Setting” tab.

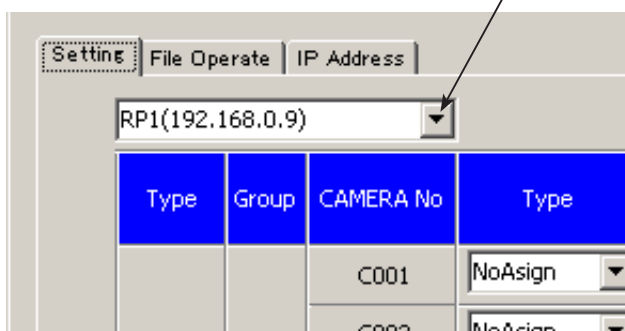

Type	Group	CAMERA No	Type
		C001	NoAssign
		C002	NoAsian

# Setup Software


## ■ Connection authentication function (basic and digest authentication)

This allows the user name and password to be set for this unit, and the remote cameras with the user authentication function enabled can be controlled.

Configure this setting on the “User Auth.” tab of the Setup Software.

### Note

The user authentication function is only enabled when the unit is controlling remote cameras connected via IP connection. Also refer to the Operating Instructions for the remote camera.

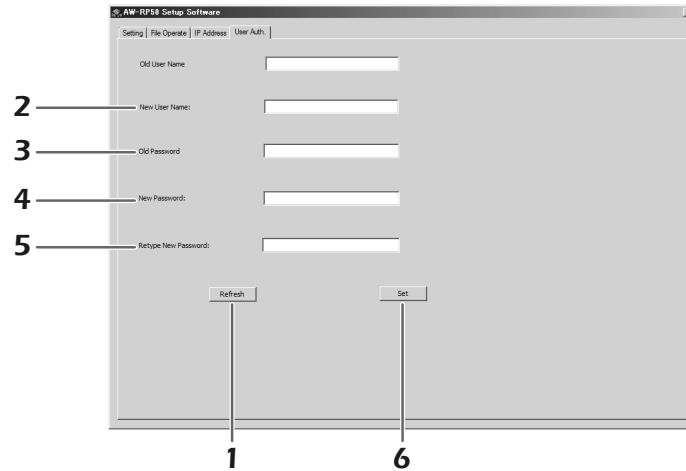

### 1 Click the [Refresh] button.

The user name set on this unit will display in “Old User Name”.

- The factory default is “admin”.

### 2 In the “New User Name” box, enter the new user name to set.

### 3 In the “Old Password” box, enter the password set for this unit.

Characters entered are displayed as “\*\*”.

- The factory default is “12345”.

### 4 In the “New Password” box, enter the new password to set.

Characters entered are displayed as “\*\*”.

### 5 In the “Retype New Password” box, enter the same password that was entered in step 4.

Characters entered are displayed as “\*\*”.

### 6 Click the [Set] button.

The user name and password will be set on this unit.

When remote cameras with the user authentication function enabled are controlled, the user name and password that were set here will be used. Enter the user name and password configured on the connected device.

# Table of menu items

Button	Menu item	Control device	Initial value	Setting	
1	GAIN/PED	GAIN	AW-HE50		Auto, 0dB, 3dB, 6dB, 9dB, 12dB, 15dB, 18dB
			AW-HE100		AUTO, 0 to 12dB, 15dB, 18dB (0dB to 12dB: 1 step)
			AW-HE870		AUTO, -6dB to 18dB (1 step)
			AW-E860, AW-E750, AW-E650, AW-E350		AUTO, 0 to 30dB, N/Eye L, N/Eye, N/Eye H
			AK-HC1500, AK-HC1800		LOW, MID, HIGH, S.GAIN1, S.GAIN2, S.GAIN3
	PEDESTAL	AW-HE50			-10 to +10
		AW-HE100			-30 to +30
		AW-HE870			-150 to +150
		AW-E860, AW-E750, AW-E650, AW-E350			-150 to +150
		AK-HC1500, AK-HC1800			-150 to +150
2	R/BGAIN	R GAIN	AW-HE50		"---"
			AW-HE100		-30 to +30
			AW-HE870		-150 to +150
			AW-E860, AW-E750, AW-E650, AW-E350		-150 to +150
			AK-HC1500, AK-HC1800		-150 to +150
	B GAIN	AW-HE50			"---"
		AW-HE100			-30 to +30
		AW-HE870			-150 to +150
		AW-E860, AW-E750, AW-E650, AW-E350			-150 to +150
		AK-HC1500, AK-HC1800			-150 to +150
3	R/BPED	R PED	AW-HE50		"---"
			AW-HE100		"---"
			AW-HE870		-150 to +150
			AW-E860, AW-E750, AW-E650, AW-E350		-150 to +150
			AK-HC1500, AK-HC1800		-100 to +100
	B PED	AW-HE50			"---"
		AW-HE100			"---"
		AW-HE870			-150 to +150
		AW-E860, AW-E750, AW-E650, AW-E350			-150 to +150
		AK-HC1500, AK-HC1800			-100 to +100
4	AWB/ABB	AWB MOD	AW-HE50		AWB A, AWB B, ATW
			AW-HE100		AWB A, AWB B, 3200K, 5600K, ATW
			AW-HE870		AWB A, AWB B, 3200K, 5600K, ATW
			AW-E860, AW-E750, AW-E650, AW-E350		AWB A, AWB B, 3200K, 5600K, ATW
			AK-HC1500, AK-HC1800		"---"
	SET			AWB, ABB <b>Note:</b> "ABB" is not displayed on the AW-HE50.	

## Table of menu items

Button	Menu item		Control device	Initial value	Setting
5	SHUTTER	SHUTTER	AW-HE50		Off, Step, Synchro
			AW-HE100		Off, Step, Synchro
			AW-HE870		Off, Step, Synchro, ELC
			AW-E860, AW-E750, AW-E650, AW-E350		Off, Step, Synchro, ELC
			AK-HC1500, AK-HC1800		Off, Step, Synchro
	SPEED		AW-HE50		1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000
			AW-HE100		1/100, 1/250, 1/500, 1/1000, 1/2000
			AW-HE870		1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000
			AW-E860, AW-E750, AW-E650, AW-E350		1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4000, 1/10000
			AK-HC1500, AK-HC1800		VIDEO: 1/100, 1/120, 1/250, 1/500, 1/1000, 1/2000 (second)  FILM: 180.0, 172.8, 144.0, 120.0, 90.0, 45.0 (degree)
6	DETAIL	DETAIL			Off, 0n
		LEVEL	AW-HE50		LOW, HIGH
			AW-HE100		0 to 14
			AW-HE870		LOW, HIGH
			AW-E860, AW-E750, AW-E650, AW-E350		LOW, HIGH
			AK-HC1500, AK-HC1800		"---"
7	SCENE/ MODE	SCENE	AW-HE50		F-AUTO, MANU1, MANU2, MANU3
			AW-HE100		HALOGEN, FLUORE, DAYLIGHT, USER
			AW-HE870		HALOGEN, FLUORE, OUTDOOR, USER
			AW-E860, AW-E750, AW-E650, AW-E350		HALOGEN, FLUORE, OUTDOOR, USER
			AK-HC1500, AK-HC1800		CURRENT, PRESET, USER1, USER2
		MODE		BAR, CAM	
8	CAMERA	[1]GROUP	1.GROUP SELECT	1	1 to 20
		[2]POWER	1.CAM POWER	GROUP ON	GROUP OFF, GROUP ON, ALL OFF, ALL ON
			2.AUTO ON	0n	Off, 0n
		[3]TALLY	1.TALLY OUT	Off	Off, 0n



# Table of menu items

Button	Menu item		Control device	Initial value	Setting	
9	SETUP	[1]USER	1.USER1		AWB	SWLINK, BUSCONT, FASIST, CAMSEL, TALLY_IP, CAMINF, AWB, ABB, POWER OFF, CAM_PINP DISP, CAM_PINP CTL, CAM_PINP POS
			2.USER2		ABB	SWLINK, BUSCONT, FASIST, CAMSEL, TALLY_IP, CAMINF, AWB, ABB, POWER OFF, CAM_PINP DISP, CAM_PINP CTL, CAM_PINP POS
		[2]SW LINK	1.SWLINK		0n	Off, 0n
			2.BUSCONT		Off	Off, 0n
			3.BUS		AUX	AUX, PVW, PinP, KEY
			4.FASIST		Off	Off, 0n
			5.CAMSEL		Off	Off, 0n
			6.TALLY_IP		Off	Off, 0n
			7.P/T LEVER		Self	Self, SW, Button Select
		[3]SW DISP	1.CAMINF		0n	Off, 0n
			2.FORMAT		0n	Off, 0n
			3.CAMNAME		0n	Off, 0n
			4.SCENE		0n	Off, 0n
			5.GAIN		0n	Off, 0n
			6.SHUTTER		0n	Off, 0n
			7.IRIS		0n	Off, 0n
			8.FILTER		0n	Off, 0n
			9.ALARM		0n	Off, 0n
		[4]OPERATE	1.PAN DIR		NORMAL	NORMAL, REVERSE
			2.TILT DIR		NORMAL	NORMAL, REVERSE
			3.ZOOM DIR		NORMAL	NORMAL, REVERSE
			4.FOCUS DIR		NORMAL	NORMAL, REVERSE
			5.SPEED WITH Z	AW-HE50		Off, 0n
				AW-HE100		Off, 1, 2
				AW-PH360, AW-PH400, AW-PH405, AW-PH650		Off, 1, 2
			6.SPEED TARGET		P/T/Z/F	P/T/Z/F, P/T
			7.FOCUS/IRIS		STANDARD	STANDARD, EXCHANGE
			8.P/T CURV		1	1 to 5
			9.PT ACTIVE		P/T	P/T, P/T/Z/F
		[5]PRESET	1.DIAG SPEED	AW-HE50	10	1 to 30
				AW-HE100	30	1 to 30
				AW-PH360, AW-PH400, AW-PH405, AW-PH650	30	1 to 30
			2.SCOPE	AW-HE50	MODE A	MODE A, MODE B, MODE C
			AW-HE100		“---”	
			AW-PH360, AW-PH400, AW-PH405, AW-PH650		“---”	
		3.HOME POSITION			SET	

## Table of menu items

Button	Menu item	Control device	Initial value	Setting		
9	[6]FUNCTION	1.ND FILTER	AW-HE50	“---”		
			AW-HE100	“---”		
			AW-HE870	Off, On		
			AW-E860, AW-E750, AW-E650, AW-E350	Off, On		
			AK-HC1500, AK-HC1800	Clear, 1/4, 1/16, 1/64		
		2.OPTION	AW-HE50	Off, On		
			AW-HE100	Off, On		
			AW-PH360, AW-PH400, AW-PH405	Off, On		
			AW-PH650	Off, On		
		3.DEFROSTER	AW-HE50	“---”		
			AW-HE100	“---”		
			AW-PH360, AW-PH400, AW-PH405	Off, On		
			AW-PH650	Off, On		
		4.WIPER	AW-HE50	“---”		
			AW-HE100	“---”		
			AW-PH360, AW-PH400, AW-PH405	Off, On		
			AW-PH650	Off, On		
		5.HEATER/FAN	AW-HE50	“---”		
			AW-HE100	“---”		
			AW-PH360, AW-PH400, AW-PH405	Off, On		
			AW-PH650	Off, On		
		6.LAMP	AW-HE50	“---”		
			AW-HE100	“---”		
			AW-PH360, AW-PH400, AW-PH405	Off, On		
	AW-PH650		Off, On			
	[7]PTZ ADJ	1.Z MIN SPEED		Off	Off, 1 to 8	
		2.LIMIT UP	AW-HE50		Off, On	
			AW-HE100		EXEC	
			AW-PH360, AW-PH400, AW-PH405, AW-PH650		EXEC	
		3.LIMIT DOWN	AW-HE50		Off, On	
			AW-HE100		EXEC	
			AW-PH360, AW-PH400, AW-PH405, AW-PH650		EXEC	
		4.LIMIT LEFT	AW-HE50		Off, On	
			AW-HE100		EXEC	
			AW-PH360, AW-PH400, AW-PH405, AW-PH650		EXEC	
		5.LIMIT RIGHT	AW-HE50		Off, On	
			AW-HE100		EXEC	
			AW-PH360, AW-PH400, AW-PH405, AW-PH650		EXEC	
		[8]GPI	1.PRESET CTL1		CAM1 : PRE1	CAM1 : PRE1 to CAM100 : PRE100, ALL : PRE1 to ALL : PRE100
			2.PRESET CTL2		CAM2 : PRE1	
	3.PRESET CTL3			CAM3 : PRE1		
	[9]LCD BL	1.BACKLIGHT		On	Off, On	
	[10]MENU CTL	1.MENU CONTROL		ENABLE	ENABLE, DISABLE	

# Table of menu items

Button	Menu item	Control device	Initial value	Setting	
10 SYSTEM	[1]CAMERA CTL	1.CAM1 to 100.CAM100	NoAssign	Serial, Network, NoAssign	
	[2]CAM ASSIGN	1.CAM1 to 100.CAM100	192.168.000.010		
	[3]SW CTL	1.SW	NoAssign	Network, NoAssign	
	[4]SW ASSIGN	1.INPUT1		CAM1	NoAssign, CAM1 to 100
		2.INPUT2		CAM2	
		3.INPUT3		CAM3	
		4.INPUT4		CAM4	
		5.INPUT5		CAM5	
	[5]AUTO SET IP	1.AUTO SETUP		RENEW IP ADR	RENEW IP ADR, KEEP IP ADR, ALL CLEAR
	[6]NETWORK	1.IP ADDRESS		192.168.000.009	
		2.SUBNETMASK		255.255.255.000	
		3.GATEWAY		192.168.000.001	
4.MAC ADDRESS				Display only	
[7]CAM IP ADR	1.IP:CAM1 to 100.IP:CAM100		192.168.000.010 to 192.168.000.109		
[8]CAM PORT	1.PORT:CAM1 to 100.PORT:100		80	1 to 65535	
[9]SW IP ADR	1.IP:SW		192.168.000.008		
[10]ALARM	1.POWER			ALARM, No ALARM	
	2.CAM*** (Note)			FAN ALM, P/T ALM, FAN ALM+P/T ALM, No ALARM	
	3.CAM*** (Note)				
	4.CAM*** (Note)				
	5.CAM*** (Note)				
	6.CAM*** (Note)				
[11]INITIALIZE	1.INITIALIZE			ALL, SETUP	
[12]VERSION	1.SYSTEM VER			V.***.**	
	2.PROGRAM VER			V.****	
	3.FPGA VER			V.****	

**Note:** "\*\*\*" is the number of the camera in the selected group of cameras.

**Panasonic Corporation**

Web Site: <http://www.panasonic.com>

© Panasonic Corporation 2011